



## LOADING LABELS


- 1** If labeler has no label guide: Snap label roll between hubs. Tear off and discard first twelve labels and backing paper.

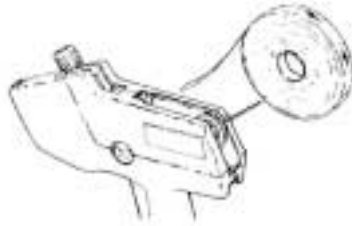

- If labeler has label guide: Snap label roll between hubs. Tear off and discard first twelve labels and backing paper. Then, insert label strip into guide slot as shown.

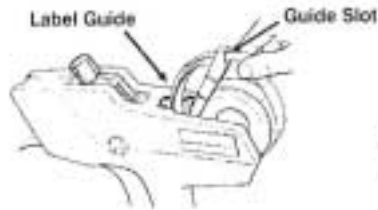


- 2** Squeeze and hold operating lever half way, and feed label strip under brake wheels.

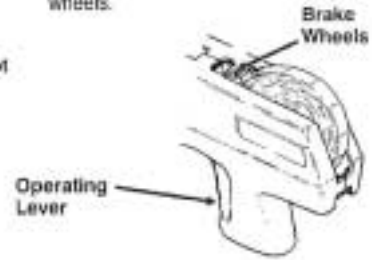

- 3** Continue feeding label strip until about twelve labels come out here. Release operating lever.




- 4** a. Feed label strip up under plate until two labels come out here.

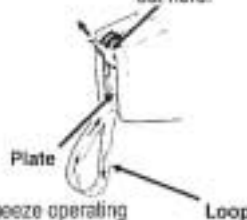


- b. Squeeze operating lever halfway and rewind label roll until loop is removed.


- 5** Grasp label strip and pull briskly toward operating lever.

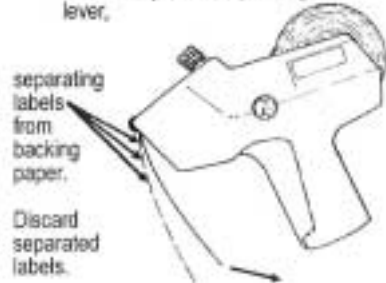

- 6** Tear backing paper as shown.

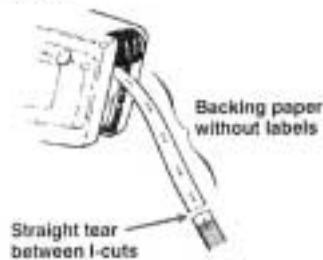


- 7** Completely squeeze operating lever, exposing feedwheel. Insert backing paper into slot. When paper bows up, maintain finger pressure and release operating lever.

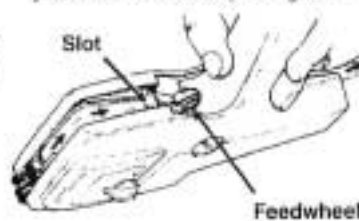

- 8** Squeeze operating lever several times until backing paper exits labeler. If backing paper does not become taut and exit at rear, remove backing paper from slot and repeat steps 6 and 7.

## INKING


- 1** Turn latch to release ink roll door and carefully pull it completely out of labeler.

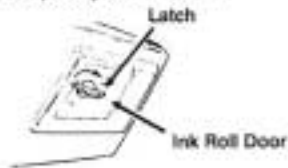

- 2** Fold a piece of scrap backing paper.




- 3** Insert folded backing paper between ink roll and carrier. Pull to snap old ink roll free.

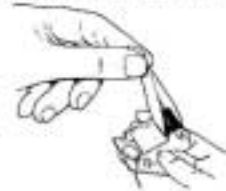

- 4** Cut off end of new roll pouch. Using pouch to protect fingers, slide carrier into pouch and snap new ink roll into carrier (one side at a time).



- 5** Insert ink roll into ink door opening. Tilt ink door and press in...

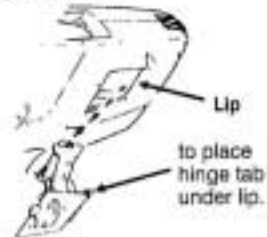

- 6** Latch ink roll door securely.