

# Label Loading Instructions



1. Open the base plate and then open the label roll holder.

2. Insert label roll into the holder and slide labels through machine with labels facing upwards. Close the label roll.

3. Pull the labels through the machine about 10 cm. Close the inner base plate and then the outer base plate, keeping the labels centered.

4. To adjust print on labels, adjust the head screws and move print head backward or forward. Re-tighten screw after adjusting.

5. To locate the indicator on band, make dial knob and select the required digit, then push it back into place.

6. To open the ink roller holder, pull top outwards.

7. Replace the ink roller by pressing gently as indicated.