



Full Size Cooker-Warmer

Model Series:
CEN-WARM1220

OPERATING INSTRUCTIONS

Introduction :

1. Please read instructions before using this appliance.
2. When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury.
3. Clean machine thoroughly before and after each use following the cleaning instructions provided below.


IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **Warning!** All power must be disconnected at power source before any service procedure is performed.
2. This appliance is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as drapes and other furnishings, away from appliance.
3. Extreme caution is necessary when any appliance is used by or near children and whenever the appliance is left unattended.
4. Always unplug appliance when not in use and before cleaning, adjusting, or maintaining this machine. To disconnect appliance, turn controls off and remove plug from power source.
5. Do not operate any appliance with a damaged or altered cord or plug, after the appliance malfunctions, has been dropped, or damaged. Return appliance to an authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. Do not use outdoors. This appliance is not intended for use in wet or moist locations. Never locate appliance where it may fall into water. Do not use appliance near a grease emitting appliance (i.e. fryers).
7. Connect to properly grounded outlets only. Avoid the use of extension cords. Do not run cord under carpeting, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
8. To reduce the risk of fire, it is recommended that the unit is placed on a non-combustible surface.
9. This appliance has electrical parts. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.

Electrical Requirements :

WARNING **ELECTRICAL EQUIPMENT**



Disconnect electric power supplies before servicing or cleaning.


Plug cooker-warmer into a grounded outlet with correct voltage and sufficient power capacity. Refer to the product label (serial plate) on the lamp for voltage and wattage requirements.

Operation :

1. Plug cord into grounded electrical outlet of the correct voltage. Electrical shock can occur if appliance is not grounded.
2. Put adequate water inside the unit.
3. Preheat the water in the unit by turning the knob to its highest setting and placing a cover on the unit.
4. Preheat for 15-20 minutes.
5. Place already heated food in a food pan and place in the unit. Adjust the temperature to achieve best temperature for food.
6. Do not let food get too hot, it will dry out. Be sure to keep food at food safe temperatures.
7. To disconnect appliance, remove plug from power source.

Cleaning :

WARNING **BURN HAZARD**



Allow equipment to cool before moving or cleaning to avoid injury or burns.

NOTE: Proper maintenance plays an important part in the life span and functioning of the warmer.



1. Unplug the cord and let the cooker-warmer cool before cleaning or moving.
2. Carefully empty any remaining hot water from the unit.

3. Wipe the interior and exterior of the unit with a clean damp cloth using mild soap and warm water.
4. Do not immerse in water or other liquid. Do not clean with a water jet.
5. Do not use harsh cleaners or abrasive cleaning tools on the unit. Rinse away soapy water immediately after cleaning

TIPS:

1. Ensure the entire appliance is dry before storage.
2. To remove scale, use 1 teaspoon of white vinegar to 1 cup of water, let stand, rinse and repeat if necessary.

REPAIR :

	WARNING	ELECTRICAL SHOCK HAZARD
	<p><i>Plug into a grounded 3-prong outlet. Do not remove ground prong. Do not use an adapter. Do not use an extension cord. Failure to follow these instructions can result in death, fire, or electrical shock.</i></p>	

To avoid serious injury or damage, do not repair the cooker-warmer or replace a damaged power cord yourself. Repairs must be coordinated through: Global Solutions customer service at 1-800-782-6761.

