 
 


# Assembly Instructions—UDR48, UDR72, UDR84 Greeting Card Displays

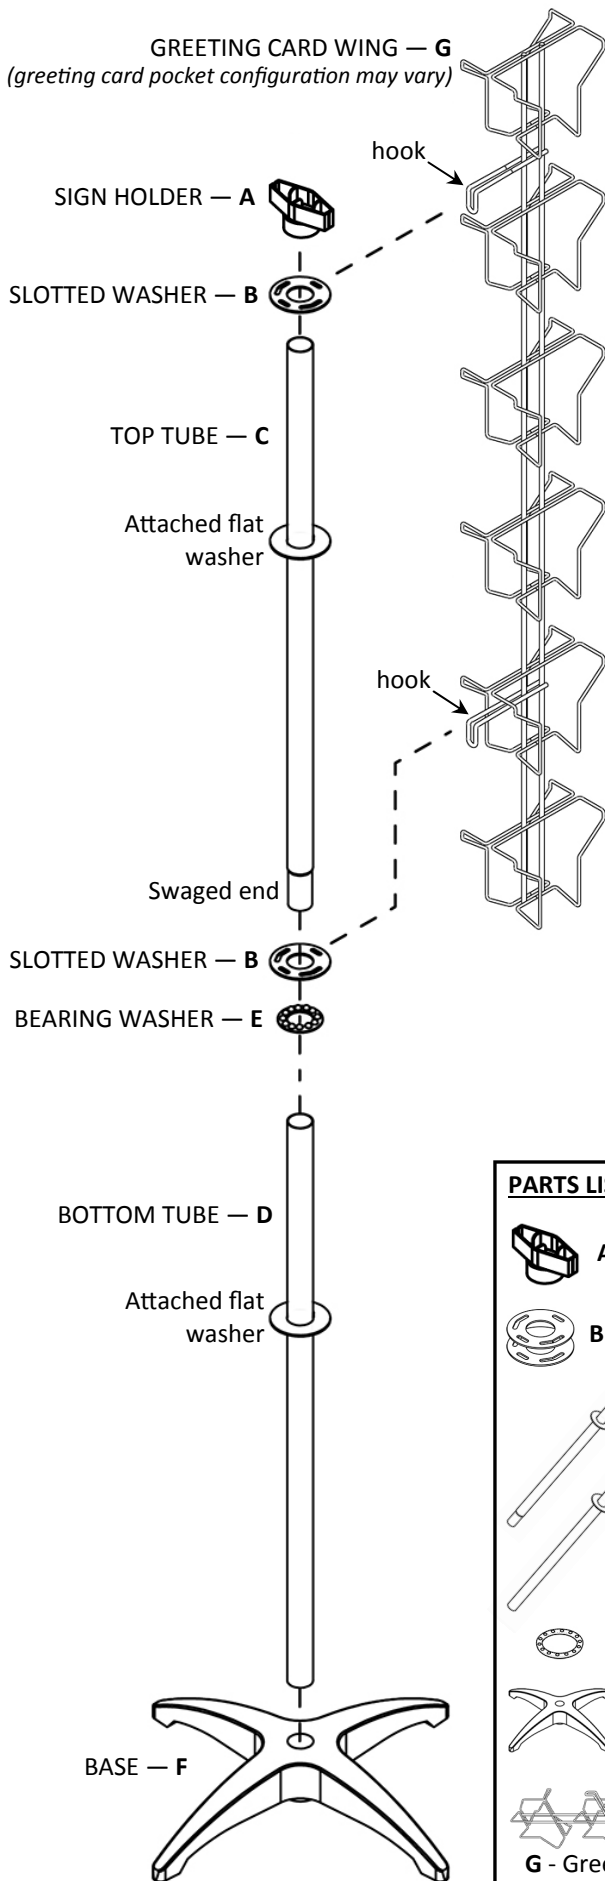

- 1) Greeting card wings (Part G) are shipped nested together. Please separate when unpacking carton.
- 2) Orient the bottom tube (Part D) so that the attached flat washer is near the top. Using a twisting motion, press opposite end into opening in middle of base (Part F). IMPORTANT: Use correct tube
- 3) Slide bearing washer (Part E) followed by slotted washer (Part B) down bottom tube (Part D) to rest on attached flat washer.
- 4) Insert swaged (narrower) end of top tube (Part C) in top end of bottom tube (Part D), and press until firmly seated.
- 5) Slide remaining slotted washer (Part B) down top tube (Part C) to rest on pre-welded washer.
- 6) Align slots of both slotted washers. Attach greeting card wings (Part G) to washer slots by using the attached wing hooks, as shown in Detail 1. Repeat for remaining wings.
- 7) Attach sign holder (Part A) to top of display.

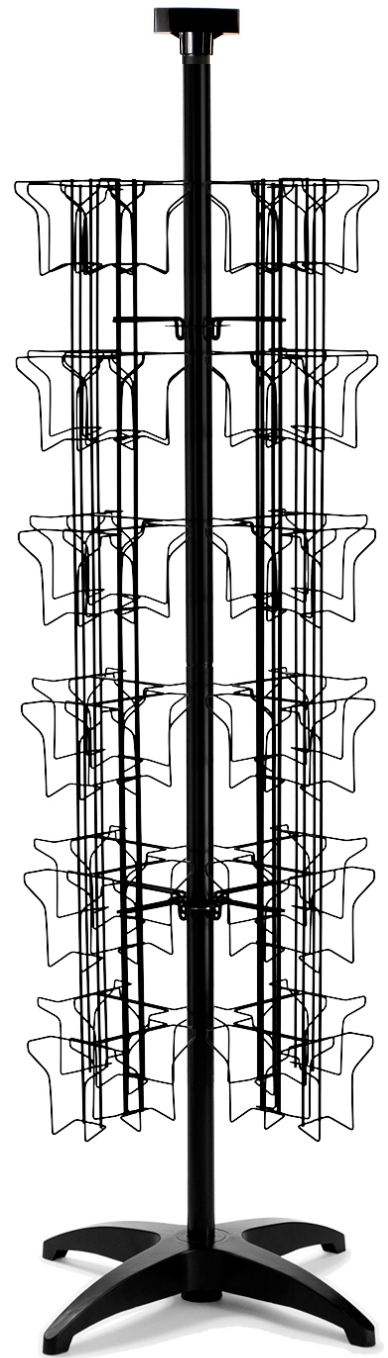

**PARTS LIST**

- A - Sign Holder (1 pc)
- B - Slotted Washer (2 pcs)
- C - Top Tube (1 pc)
- D - Bottom Tube (1 pc)
- E - Bearing Washer (1 pc)
- F - Base (1 pc)
- G - Greeting Card Wing (4 pcs)

