



Instruction Manual for Electric Heating Plate



53191 - Heating Plate

The Hubert Company LLC
9555 Dry Fork Road
Harrison, Ohio 45030 USA
513-367-8700
www.hubert.com

Thank you for purchasing this heating plate. Before using this device, be sure to carefully read and understand the following operation and safety instructions. Retain the instructions for review.



WARNING

- Do not touch any hot surfaces
- Plug only into a 3-hole grounded electrical outlet
- Do not plug or unplug unit with wet hands
- Do not immerse unit, cord or plug in liquid at any time
- Unplug cord from outlet when not in use and before cleaning
- Do not use this unit for anything other than intended use
- Do not use if unit has a damaged cord or plug, in the event the appliance malfunctions, or has been damaged in any manner
- Keep children and animals away from unit
- Ensure that the designated power supply is adequate for continual usage and the voltage is correct

OPERATION

Connecting to chafer by bolts:

1. Place flat side of the heating plate on the outside bottom of the water pan.
2. Slide the bolts through the holes and tighten with the nuts

After attachment:

1. Place very warm tap water to proper depth (at least 1”) in the water pan.
2. Heat to water to proper food temperature before placing the food pan in the chafer. This will take about 30 minutes. Ensure that food is warm and at proper temperature when you place it in the chafer. Chafers are meant to **keep** food warm not to **increase** the temperature levels of the food

CLEANING:

Do not immerse the unit in water or any other liquid. If liquid enters the electrical compartment it may cause a short circuit or electrical shock

- Disconnect the cord from the outlet.
- Allow unit to completely cool before cleaning.
- Remove chafer heater either by loosening the nuts on the bolts.
- Wipe the outside of the unit with a damp cloth, then wipe dry.
- To avoid damage, do not use abrasive cleaners or scouring pads.

TROUBLESHOOTING:

Problems	Caused by	Solution
Heating Plate works but food is not staying hot	<ol style="list-style-type: none">1. Water was not warm enough when food pan was placed in chafer.2. Food in pan was cold—food must be proper temperature before placing in pan.3. Cover of the food pan is not on4. Little or no water in the pan5. Electric warmer is not in contact with the bottom of the water pan	<ol style="list-style-type: none">1. Allow enough time for water to reach proper temperature before placing food pan over the water pan in chafer.2. Heat up food before placing chafer3. Cover food4. Add water to pan5. Adjust Heating Plate closer to water pan



Correct position of chafer heater
on outside bottom of water pan

PRODUCT'S TECHNICAL PARAMETERS :

Item code	Description of goods	Voltage	Power	Size
53191	Heating Plate	120V/50-60Hz	700W	300X200X19mm

Warranty

The Hubert Company, LLC guarantees this product will not have material or process defects within one year, the warranty takes effect from the original date of purchase by the ultimate user recorded on the receipt.

The Hubert Company LLC
9555 Dry Fork Road
Harrison, Ohio 45030 USA
513-367-8700
www.hubert.com
Version 4-09092016

RECOGNIZED COMPONENT



4002586

Conforms to **UL** STD.499

