

SETUP UTILITIES FOR **CANON KSCAN V** - ALL IN ONE FOR STAND ALONE USE



← Window 1 of 4



1) Set "Paper Feed Settings"
Select Window 4 of 4 - Arrow up ▲
Click Setup — Arrow Left ◀ to
"Device Settings" Click (OK) Plain
Paper Feed Setting Arrow up ▲
to Rear Tray Click (OK)

2) Click (House icon) LCD Screen Window 1 of 4
Click Copy — Click Print Setting —
Magnify - **"FIT TO PAGE"** ◀▶ (OK)
Intensity - "0"
Page Size - "LETTER"
Page Type - "PLAIN PAPER"
Print Quality - **"HIGH"**

Printer will go to a "STAND BY MODE" after 5 minutes.
To Restart, Click (OK) Button. DO NOT Click (Power icon) "ON"
and/or (House icon) if you do it will go back to the default
settings and you will have to go throughout the setup
up once again...

PRINTING SETUP FOR **CANON KSCAN V** - ALL IN ONE




 

Placing Photo:

Open Document Cover and place photo face down on the glass in the upper left hand corner. Move Photo 1/2" from the top and 1/2" from the side.

Load Frosting Sheet in Paper Tray, Frosting Sheet side facing you.

Click Black and/or Color for your selection - Printing will Start



Printer will go to a "STAND BY MODE" after 5 minutes. To Restart, Click  Button. DO NOT Click  "ON" and/or  if you do it will go back to the default settings and you will have to go throughout the setup up once again...



If you hit the "STOP" button you will have to go back to Set-Up.