



ASSEMBLY DIRECTIONS FOR #1952 3-BASKET DISPLAY RACK

PARTS LIST:

- A. Square Basket (3)
- B. Lock Washer (12)
- C. Round Tube (12)
- D. Flat Washer (12)
- E. Long Bolt (12)
- F. Short Bolt (12)
- G. Wrench (1)
- H. Cap Nut (24)
- I. Top Pole (4)
- J. Bottom Pole (4)

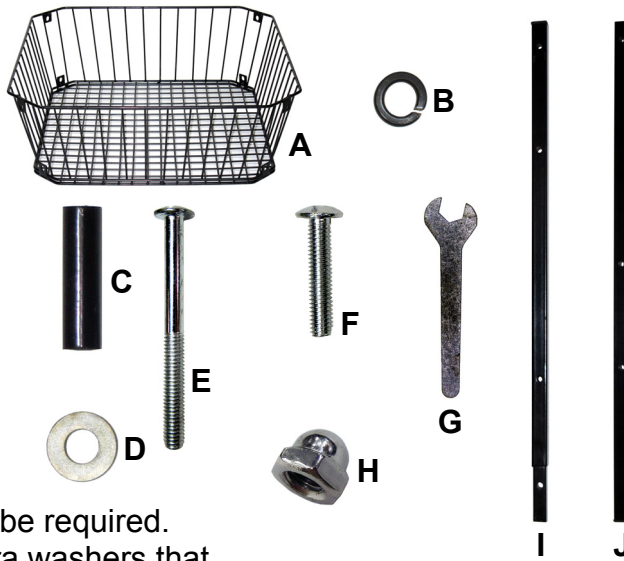

Note: Screwdriver will be required.
Please ignore any extra washers that
were packed in the hardware bag.

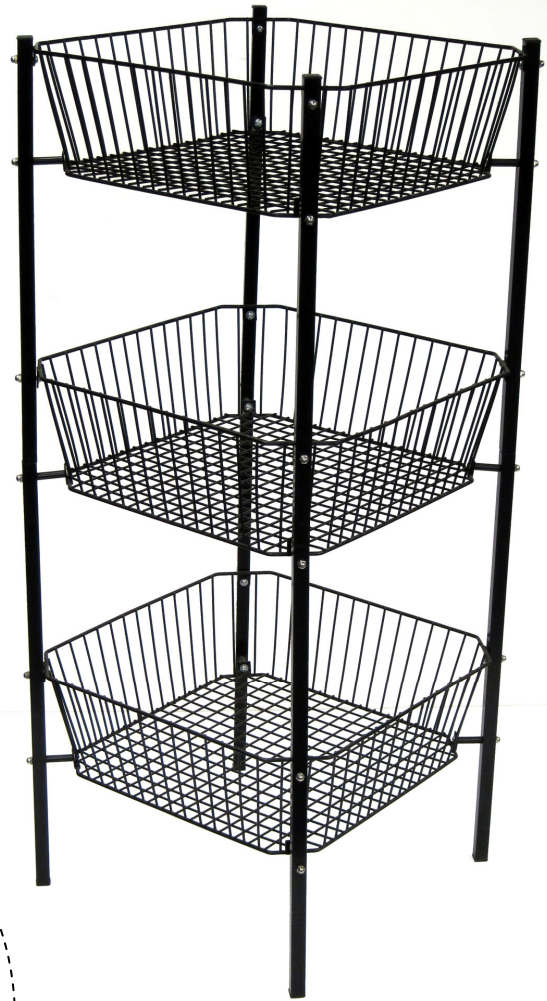

Note: make sure the hole in
swaged end remains visible
after you join the top and
bottom pole together.

Swaged end
of top pole

DIRECTIONS

- 1) Use four (4) short bolts [part F], four (4) long bolts [part E], four (4) lock washers [part B], four (4) flat washers, eight (8) cap nuts [part H] and four (4) round tubes [part C] to attach one square basket [part A] to the top end (NOT the swaged end) of all four (4) top poles [part I], as indicated in Figure 1. Note: To ease assembly, do not fully tighten fasteners until all baskets are assembled
- 2) After all four top poles are attached to the first basket, insert the swaged (or bottom) end of the top poles into the open end of the bottom poles [part J], in a way that ensures that the hole in the swaged end remains uncovered.
- 3) Repeat Step 1 for center basket and bottom basket
- 4) After all baskets are in place, tighten bolts and cap nuts securely.

Figure 1

