
page 1 of 3

WIRE CANDY/SNACK RACK, 7 LEVELS 36"W

ASSEMBLY INSTRUCTIONS

KD

READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.

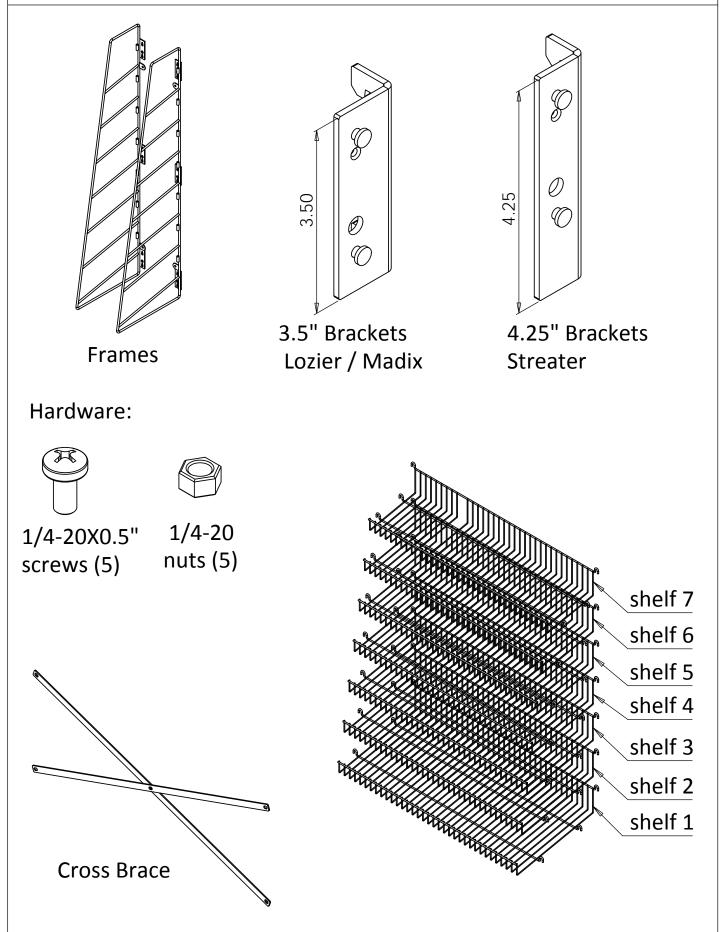

page 2 of 3

WIRE CANDY/SNACK RACK, 7 LEVELS 36"W

ASSEMBLY INSTRUCTIONS

KD

READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.


Freestanding or wall mounted instructions:

Assembly steps:

 Stand both left and right frames up vertically.
Starting at the bottom, set the shelves onto frames, inserting rear downturn hooks into cyclinder fastener on the frames.

3. Install cross brace along the back of the fixture, connecting to the flat plates on the rear of the frames inserting the bolts from the rear of the display.

4. If wall mounting, use the keyholes in the rear plate to secure with fasteners (not included). Figure 1

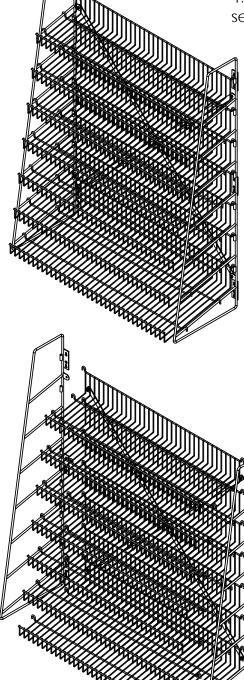

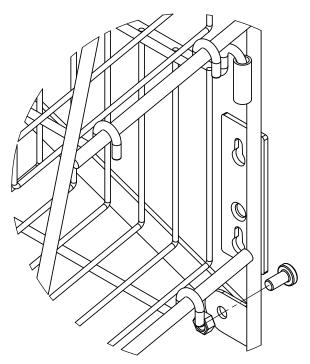


Figure 1

12	Nuts	5
11	Screws	5
9	Cross Brace	1
8	shelf 7	1
7	shelf 6	1
6	shelf 5	1
5	shelf 4	1
4	shelf 3	1
3	shelf 2	1
2	shelf 1	1
1	Frames	2
Item	Name	Quantity

page 3 of 3

WIRE CANDY/SNACK RACK, 7 LEVELS 36"W

ASSEMBLY INSTRUCTIONS

KD

READ ALL INSTRUCTIONS BEFORE YOU BEGIN. DO NOT JUMP AHEAD OF ANY STEP.

