

Assembly Instructions



Parts Include:

| | | | |
|---|-----------------------|----|------------------------|
| 6 | Bins | 19 | Insert Nuts |
| 2 | Legs | 19 | Bolts |
| 2 | Feet | 1 | Allen Wrench |
| 1 | Chalkboard (optional) | 4 | Casters (if requested) |

The bolts and nuts used to assemble these units may have oil on them. Please handle all parts as little as possible during assembly and wash your hands.

1. If you requested casters, tap a caster in each of the caster sockets in the feet.
2. In one end of each leg there are two holes. These two holes correspond to the holes in the two feet. Attach one foot to each leg using the enclosed bolts and insert nuts.
3. Place two bins on the floor, back to back as in the picture above, and bolt these two bins together using one bolt and one nut. Repeat on the remaining four bins.
4. Spread the bins apart to where the holes in the sides line up with the holes in the legs. Attach one leg to the bins using six bolts and six nuts. **The foot must be on the opposite side of the bins.**
5. Flip the display over so that the holes on the other side of the bins are facing up and repeat step 4 on the other leg. **Again, the foot must be on the opposite side of the bins.**
4. Stand the unit in it's correct position. Slide the chalkboard in the top of the unit if included.