

# ASSEMBLY INSTRUCTIONS



Stand the 3 crates on end as shown in the picture to the left. Please notice that the crates have one set of holes that are closer to the top of the crate. This is the front of the display and you will attach the short legs to the front of the crates.



**VERY IMPORTANT!!! ONLY LOOSELY TIGHTEN THE BOLTS UNTIL THE UNIT IS STANDING.**

Attach a front leg and the right back leg to the 3 bins as shown in the picture to the left. Make sure the blocks on the right back leg are turned towards the inside of the unit. If the holes do not line up, use the other back leg. **Do not tighten the bolts with the allen wrench.**



Turn the unit over and attach the remaining 2 legs to other side of the unit. **Do not tighten the bolts with the allen wrench.**



## Parts included:

<b>3 Bins</b>	<b>24 Bolts</b>
<b>2 Front Legs</b>	<b>24 Nuts</b>
<b>2 Back Legs</b>	<b>1 Allen Wrench</b>
<b>1 Chalkboard</b>	

Stand the unit up and slide the chalkboard into the top of the unit. Make sure the unit is square and standing properly. **Tighten all bolts with the allen wrench provided.**