



## INSTRUCTION MANUAL OF

English

## FOOD WARMER

ITEM NO. X83189A-3, X83289A-3 &amp; X83889A-3

Specifications	Capacity	:	Fits One Full-size, Two Half-size 100mm Gastronorm Pans or Two Bain-Maries
	Voltage	:	120V ~ 60Hz
	Power Consumption	:	1000 WATTS

They are designed to keep food warm within the food pan or soup warm within the bain-maries in the chafing unit. The combination of each item is as below:

X83189A-3 - a lid, a full size food pan, an electric water pan, a wire lid holder and a power cable.


X83289A-3 - a lid, 2 half-size food pans, an electric water pan, a wire lid holder and power cable.

X83889A-3 - 2 bain-maries with lids, a top plate, an electric water pan, a wire lid holder, a power cable and 2 ladles.

## IMPORTANT SAFEGUARDS

- 1) Read all instructions.
- 2) Do not touch hot surfaces. Use handles or knobs.
- 3) To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- 4) Close supervision is necessary when any appliance is used by or near children.
- 5) Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- 6) Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- 7) The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- 8) Do not use outdoors.
- 9) Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 10) Do not place on or near a hot gas or electric burner, or in a heated oven.
- 11) Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- 12) Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to OFF, then remove plug from wall outlet.
- 13) Do not use appliance for other than intended use.
- 14) The appliance must be earthed.
- 15) Do not operate when the Water Pan is empty. If more than one Electric Chafing Dish is plugged into wall outlet, a qualified electrician should be consulted.
- 16) **SAVE THESE INSTRUCTIONS.**

### To Assemble The Food Warmer

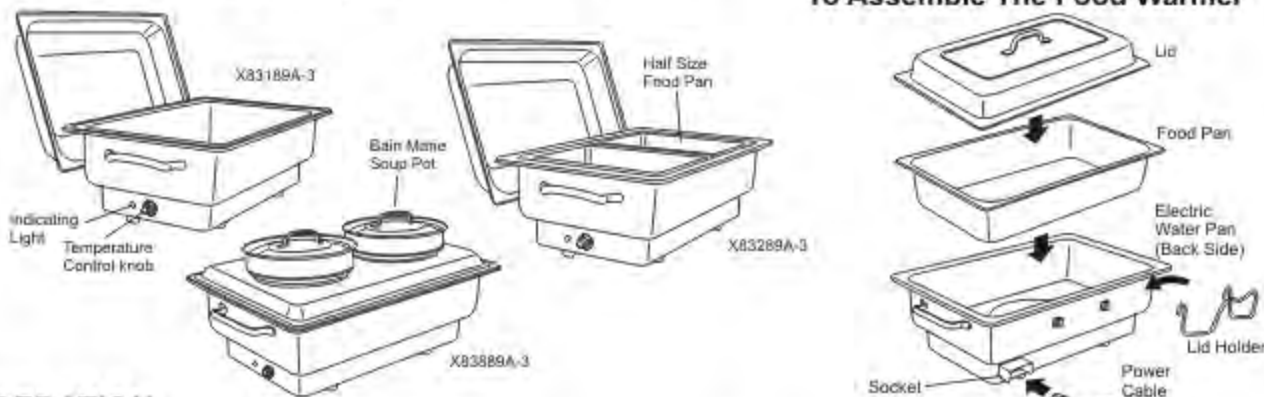

## OPERATION

- 1) **TEMPERATURE CONTROL & INDICATING LIGHT** - When the temperature control knob is turned fully clockwise, the temperature is at the maximum setting. At the maximum setting water in the water pan will be heated to approximate **85°C (±10°C)**. At this point some steam will be visible escaping around the edges of the food pan. Overheating of the water is protected by the safety thermostat, which cuts at **118°C**.  
When the water reaches the pre-set temperature, the power and the indicating light are automatically cut off. Should the temperature subsequently drop **10°C** below the original temperature, the power and the indicating light will automatically be switched back on. If a lower temperature is required turn the setting down. The temperature control knob will maintain the temperature at that setting within **10°C** tolerance.
- 2) **WATER LEVEL** - There is a water line inside the water pan. When the food pan(s) or the bain maries start to float, it is an indication of too much water. If cold water is used allow at least 25 minutes before your required time of use. Hot water will give a quicker time of use.  
Fill only up to the maximum water level indicated on the side of the water pan. Do not overfill with water and do not allow the food pan or bain maries to float. Do not operate without water in the water pan.
- 3) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- 4) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- 5) If a longer detachable power-supply cord or extension cord is used,
  - (a) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
  - (b) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
 If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.

## CLEANING AND USER MAINTENANCE

- 1) Spilled food or soup should be removed immediately from all exterior surfaces. Only the stainless steel Bain - Marie and lid are dishwasher safe. The Water Jacket and Carrier Ring should be wiped over with a damp cloth using a mild detergent.
- 2) Any other servicing should be performed by an authorized service representative.
- 3) These appliances are for commercial and household use.

## CAUTION :

**To ensure continued protection against risk of electric shock, connect to properly grounded outlets only**