


TOTAL VIEW

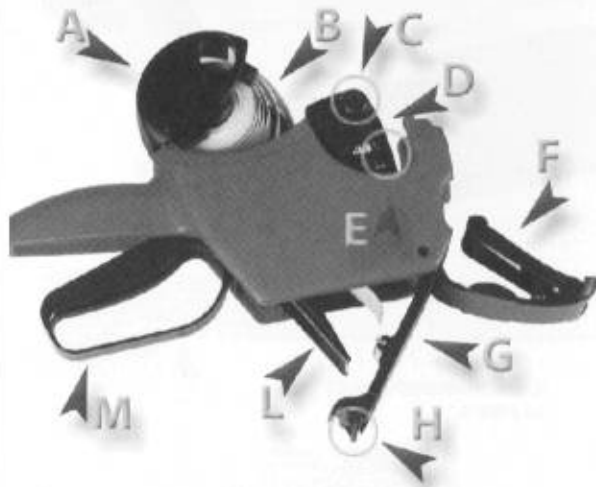

A Label Roll Cover

B Label Roll

C Knob

D Print-Head

E Screw for print head adjustment

F Ink Roller Holder

G Base Plate

H Rounded end of base plate

I Inner Base Plate

M Handle

ONE-YEAR LIMITED WARRANTY
THIS LIMITED WARRANTY IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OR REPRESENTATIONS EXPRESSED OR IMPLIED, INCLUDING MERCHANTABILITY OR FITNESS FOR BUYER'S PURPOSES. THERE IS NO WARRANTY WHICH EXTENDS BEYOND THE LIMITED WARRANTY.


This machine is warranted to be free from defects in materials and workmanship for a period of one (1) year from the date of shipment to the purchaser. Avery Dennison Corporation further warrants the satisfactory operation of this machine during the warranty period, unless the machine is damaged by accident, abuse or violence, or the purchaser uses other than the standard supplies furnished by or meeting the specifications of Avery Dennison Corporation, or the machine is operated or maintained contrary to instructions provided by Avery Dennison Corporation. This warranty applies only to the U.S.A.

Visit www.monarch.com for sales, service, supplies, information, and telephone numbers for our locations throughout the world.

TOLL FREE:
1-800-543-6650 (In the U.S.A.)
1-800-387-4740 (In Canada)



OPERATING INSTRUCTIONS

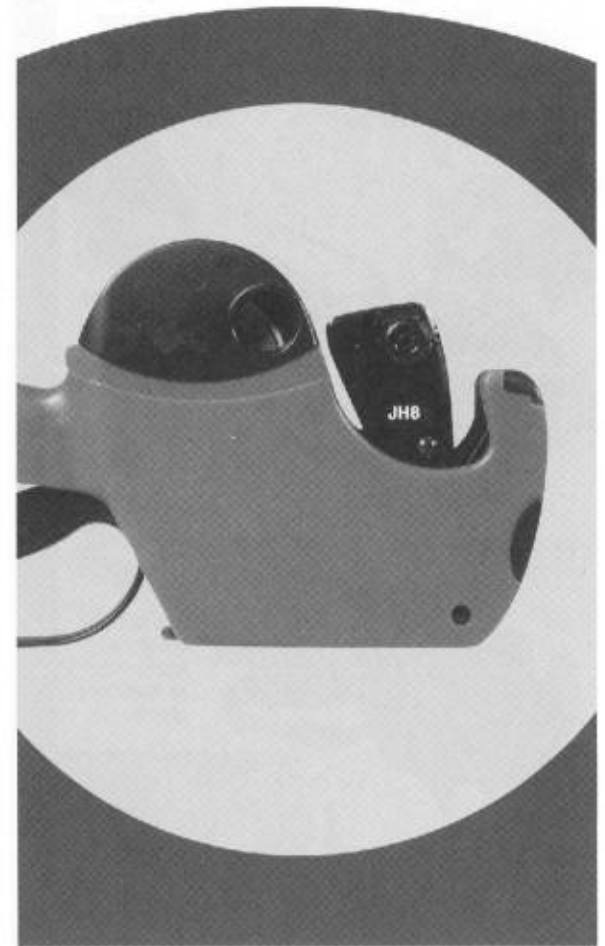

TCXPOI Rev. AA 12/08

©2008 Avery Dennison Corporation
All rights reserved.

TO LOAD ROLL



1
To open the label roll holder (A), pull upwards using the hole provided.




2
To open the base plate (G), pull down using rounded end of the base plate (H).

Open the inner base plate (L). Insert the label roll into the holder.



3
Slide the labels through the machine with the labels facing upwards.

Close the label roll holder (A).

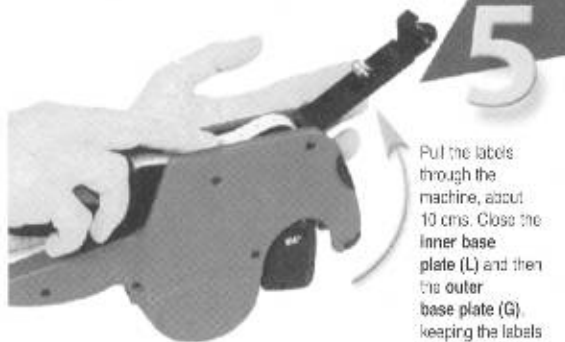

4
Close the label roll holder (A).

5
Put the labels through the machine, about 10 cms. Close the inner base plate (L) and then the outer base plate (G), keeping the labels central, as shown.

PRINT-HEAD ADJUSTMENT



6
To adjust the print on the labels, slacken the head

screws (E) and move the print head (D) backwards or forwards. Then re-tighten the screws (E).

PRINTING SETTING



To locate the indicator on the band,

7
move the dial knob (C) and select the required digit, then push it back into place.

CHANGING INK ROLLER

To open the ink roller holder (F), pull outwards.



8
To open the ink roller holder (F), pull outwards.

9
Replace the ink roller by pressing green y as indicated.