


果汁壺使用說明書


Koolkore Pitcher User Instructions

1

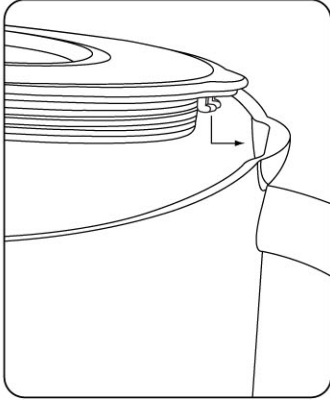


- 將蓋邊的小掛勾對準壺身頂內側的凹凸處
ALIGN THE SMALL TONGUES OF LID TO THE NOTCH LOCATED AT THE INNER RIM OF THE BODY NEAR THE HANDLE

2

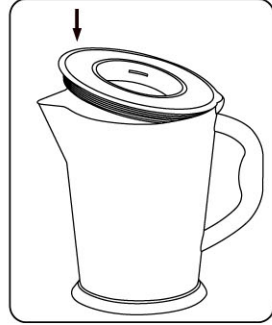


- 蓋上蓋子
CLOSE THE LID DOWN

3

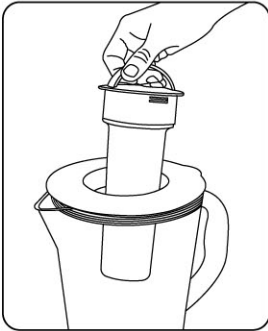

- 插入預先凍好的冰柱
INSERT PRE-FROZEN ICE CORE THROUGH THE LID

4

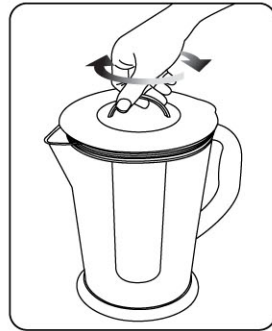

- 把冰柱旋轉至鎖在冰壺中
TURN THE ICE CORE TO LOCK POSITION

注意事項：本產品勿近明火及微波爐加熱，禁止對冰柱加熱

NOTICE: DO NOT PLACE PITCHER NEAR FIRE OR PUT IN A MICROWAVE OVEN. DO NOT HEAT THE ICE CORE.