


# **Installation Instructions**



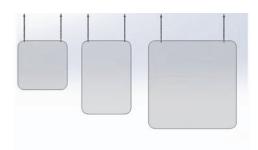

Item No.	Description
SHS2424	Safety Guard Hanging, Acrylic, 23.5" x 23.5"
SHS2436	Safety Guard Hanging, Acrylic, 23.5" x 35.5"
SHS4042	Safety Guard Hanging, Acrylic, 40" x 42"

 
### INSTALLATION

#### **Kit Contents**


Part	Quantity
Acrylic Guard	1
Chain, 8' Length	2
Eye Screw, Threaded	2
S-Hook	4

## **Tools You Will Need**


- Pliers
- Drill and 3/32" drill bit
- · Flat head screwdriver
- 1. Open the carton and verify the contents.
- 2. Verify that the location you will be installing the Safety Guard has a structural support capable of supporting 40 lbs. of weight. If you are uncertain, consult with construction professionals before commencing installation. The eye screws are designed to screw only into ceiling locations with an adequate structural support member. CAUTION- DO NOT Place screws in unreinforced drywall or plaster applications or other non-structural materials including drop ceilings.
- Measure the distance between the two holes in the Safety Guard. Locate and mark the locations in the ceiling for the two eye screws, the same distance apart as the holes in the Safety Guard.
- 4. Using a 3/32" drill bit, drill a hole at each mark, making sure that the hole is vertically straight.
- Thread the eye screw into each hole to the full depth of the threads (no threads should be visible).



 7. Locate the S-hooks. Note that each hook has a large end and a small end. Slide the large end of the hook through the eye screw as shown. Squeeze the large end closed using pliers.



- 8. Slide one end of the chain loop over the small end of the S-hook. Squeeze small end of S-hook closed.
- Attach the large ends of remaining s-hooks into the holes in the Safety Guard. See picture below.
- 10.Raise the Safety Guard to the desired height and temporarily slide the chain links into the small ends of the s-hooks. Do not close the s-hooks yet.
- 11. Verify that the Safety Guard is level. Mark the corresponding loops on the chain with masking tape and remove the Safety Guard.
- 12.Insert a flat head screwdriver into the link below the masking tape, and twist it so the link opens. Remove the excess chain links.
- 13. Reinstall the open ends of the s-hooks into the ends of the chain. Using pliers, securely close both ends of the s-hooks.

 

14.Remove the protective paper from both sides of the Safety Guard and discard.

6. Insert the large end of an s-hook into the eye screw.

#### **CLEAN AND CARE**

- Always use a clean soft lint free cloth or micro fiber cloths along with a cleaning solution or products specifically made for cleaning Plexiglas<sup>®</sup> and acrylic plastic.
- Clean Plexiglas and acrylic with a neutral cleaner such as a solution of warm water and a small amount of dish detergent.
- Recommended cleaners for Plexiglas® and acrylic include: Novus® #1, Plexiclear, and Brillianize.

#### What Not to Do

- Do not use cleaners containing ammonia, alcohol, acetone or dry cleaning products. Cleaners with these chemicals will damage Plexiglas<sup>®</sup>, acrylic and other plastics.
- **Do not** use paper towels, abrasive materials, scratching cleansers, razor blades, brushes, steel wool or scouring pads, such as Scotch Brite<sup>®</sup> pads.
- Do not use WD-40<sup>®</sup> or petroleum, industrial or commercial cleaning products.

## **Removing Minor Scratches**

Fine scratches can be removed with a specialized mild abrasive polish such as Novus<sup>®</sup> #2, or Novus<sup>®</sup> #3. Heavier scratches may require sanding and buffing. Hand sand with series of sandpapers with increasingly finer grits (250, 400, 600). Then use a buffing wheel and buffing compound.



www.vollrath.com

The Vollrath Company, L.L.C.

1236 North 18th Street Sheboygan, WI 53081-3201 U.S.A. Main Tel: 800.624.2051 or 920.457.4851 Main Fax: 800.752.5620 or 920.459.6573

Customer Service: 800.628.0830 Canada Customer Service: 800.695.8560 Technical Services

techservicereps@vollrathco.com Induction Products: 800.825.6036

Countertop Warming Products: 800.354.1970

Toasters: 800-309-2250

All Other Products: 800.628.0832