




Outperform every day.™

Instruction Sheet

Spring Loaded Cup Dispenser

Mounting

- Wall Mount: See below.
- Rotating Stand: See Rotating Stand Assembly Instructions.

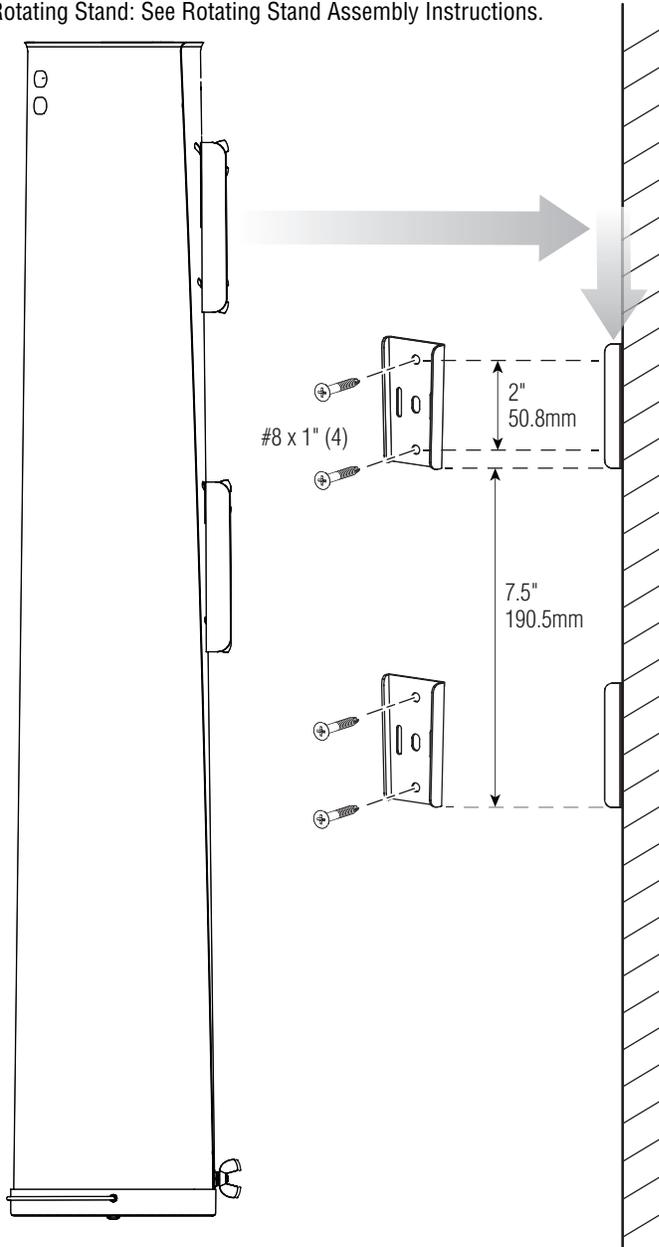


Item No.	Accommodates Cups with Rim Diameter
SLC-1	2¼ - 27⁄8" (5.7 - 7.3 cm)
SLC-2	27⁄8 - 3½" (7.3 - 8.9 cm)
SLC-3	3½ - 41⁄8" (8.9 - 10.5 cm)
SLC-4	41⁄8 - 47⁄8" (10.5 - 12.4 cm)


Wall Mounting Instructions

1. Drill the mounting holes for the brackets.
2. Install the mounting screws into the brackets.
3. Align the brackets on the dispenser with the wall-mounted brackets.
4. Slide the dispenser onto the wall-mounted brackets.

Load Cups

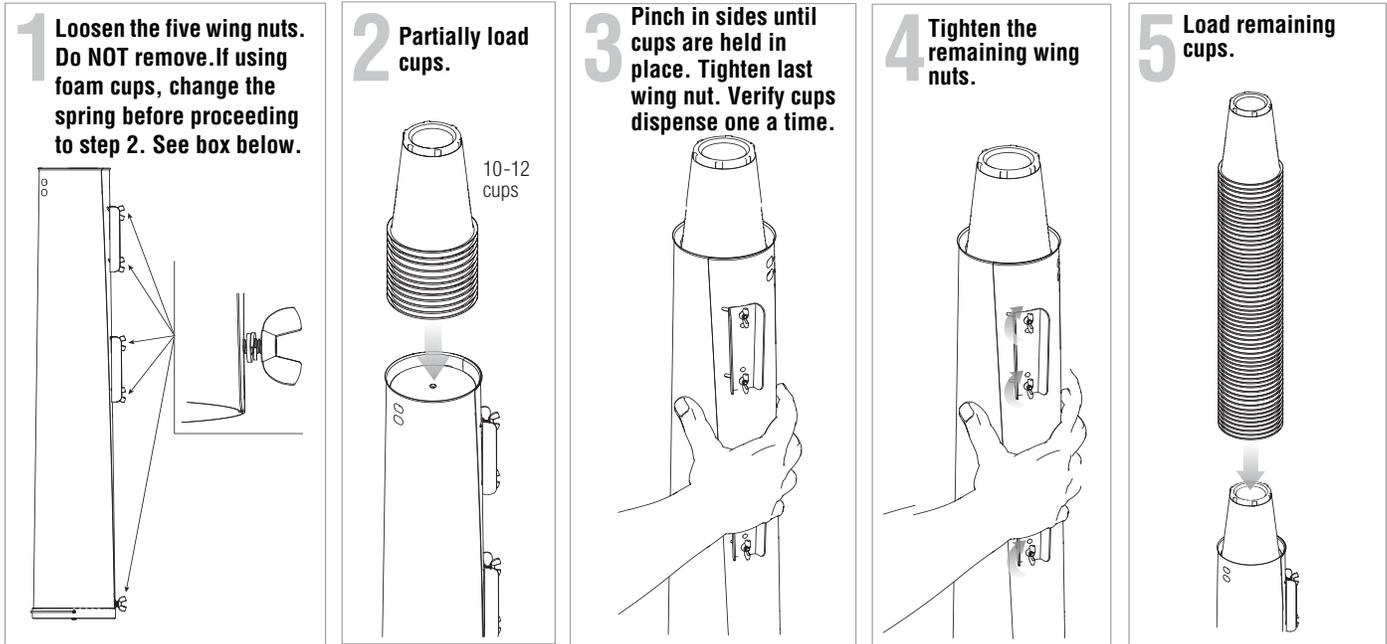

Replace the Spring - Required if Using Foam Cups

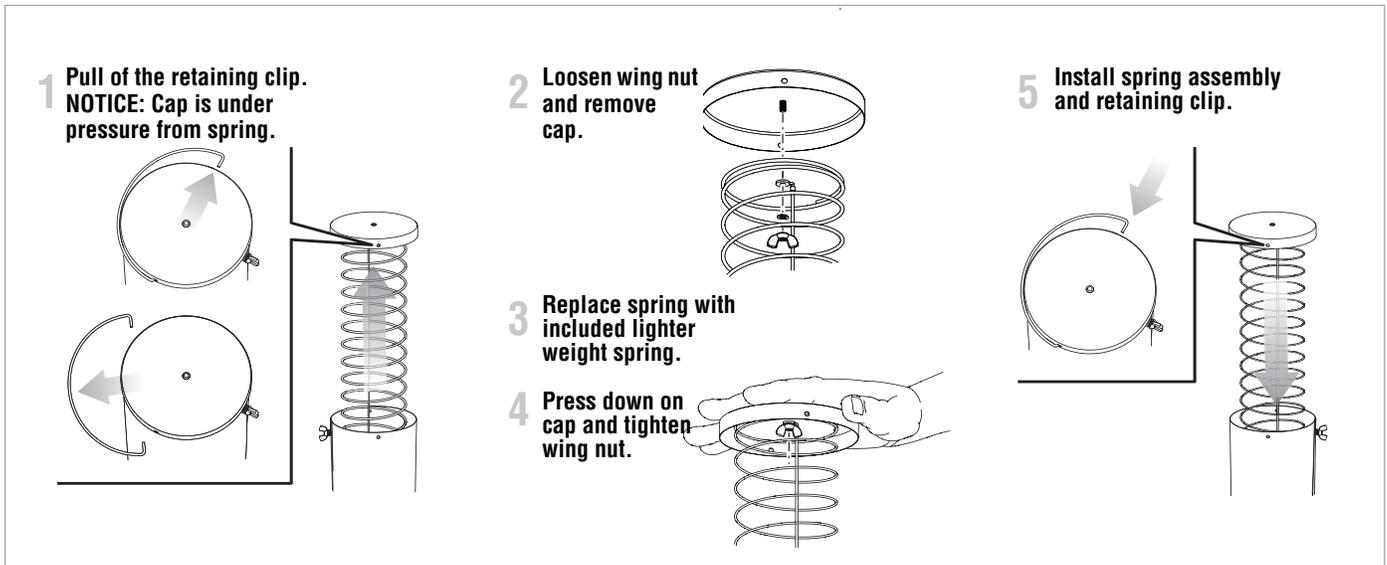

Outperform every day.™

www.vollrath.com

The Vollrath Company, L.L.C.

1236 North 18th Street
 Sheboygan, WI 53081-3201 U.S.A.
 Main Tel: 800.624.2051 or 920.457.4851
 Main Fax: 800.752.5620 or 920.459.6573
 Customer Service: 800.628.0830
 Canada Customer Service: 800.695.8560

Technical Services

techservicereps@vollrathco.com
 Induction Products: 800.825.6036
 Countertop Warming Products: 800.354.1970
 All Other Products: 800.628.0832