



Flat Rim Plate  
**6940E673** D 12 1/4" **6940E675** D 9 1/2"  
**6940E674** D 11" **6940E676** D 8 1/2"  
 (Plate Cover 5379S785) **6940E681** D 7 1/2"  
**6940E682** D 10 1/4" **6940E677** D 6 1/4"  
 (Plate Cover 5379S795) **6940E6071** D 5 3/4"



Banquet Rim Plate  
**6940E6052** D 11"  
 (Plate Cover 5379S804,  
 5379S796)



Form Plate  
**6940E6042** D 9"



Rimmed Platter  
**6940E6063** L 14 1/8" W 9 3/4"  
**6940E6076** L 12 1/2" W 8 1/4"  
**6940E6077** L 10 3/4" W 7 1/8"  
**6940E6078** L 9" W 6"



Presentation Bowl  
**6940E680** D 11 1/2" H 2" (17 oz)



Rim Pasta Bowl  
**6940E6050** D 11" H 1 3/4" (16 oz)  
 (Plate Cover 5379S804)  
 Rim Soup Plate  
**6940E679** D 9 1/2" H 1 5/8" (12 oz)



Presentation Bowl  
**6940E6092** D 10 5/8" H 1 1/2"



Pasta Bowl  
**6940E6100**  
 D 9" H 2 5/8" (9 1/2 oz)



Rim Fruit  
**6940E6049**  
 D 6 1/2" H 1 3/4" (8 1/2 oz)  
**6940E6048**  
 D 5 1/4" H 1 1/4" (4 1/2 oz)



Lion Head Soup Bowl  
**6940E6067** L 5 3/8" W 4 3/4" H 3 3/8" (18 oz)  
**6940E6082** L 4 5/8" W 4 1/8" H 3" (12 oz)  
**6940E6083** L 4 1/8" W 3 1/2" H 2 5/8" (6 oz)



Casserole Base  
**6940E624** D 8 3/4" H 3 3/4" (75 oz)  
 Lid For Casserole  
**6940E625**



Soup Bowl Base  
**6940E622** L 6 1/4" H 4 7/8" (16 oz)  
 Soup Bowl Lid  
**6940E623**



Oval Sole Dish  
**6940E609** L 8 1/4" W 5 1/2" H 1 3/4" (23 oz)  
**6940E608** L 6 3/8" W 4 1/4" H 1 3/8" (10 1/2 oz)



Oval Baker  
**6940E611**  
 L 6" W 4 1/8" H 1 3/4" (13 oz)



Stack Soup Cup  
**6940E6015** D 4 1/4" H 2" (10 oz)  
 Saucer Double Well  
**6940E6016** D 6 1/2" (Fits E6015)



Souffle Ramekin  
**6940E6069** D 4" H 2 1/8" (8 3/4 oz)  
 Underliner  
**6940E6070** D 8" (Fits E6069)



Stack Cup  
**6940E6020** L 5" H 2 1/2" (10 oz)  
**6940E689** L 4 3/8" W 3 3/8" H 2 1/4" (7 oz)  
**6940E6021** L 3 1/2" H 2" (3 1/2 oz)  
 Saucer  
**6940E6016** D 6 1/2" Double Well (Fits E689, E6020)  
**6940E690** D 6" (Fits E689)  
**6940E687** D 4 5/8" (Fits E6021)



Stack Mug  
**6940E672**  
 L 4 1/4" H 3 3/4"  
 (10 1/2 oz)



Tea Pot W/Lid  
**6940E6036**  
 L 9" W 5 3/4" H 5 3/4" (40 1/2 oz)  
**6940E6034**  
 L 6 5/8" W 4 1/4" H 4 1/2" (17 1/2 oz)  
 Lid Replacement  
**6940E6037** D 2 3/8" (For E6036)  
**6940E6035** D 1 3/4" (For E6034)



Gravy Boat  
**6940E6038**  
 L 8 1/2" W 3 1/4" H 3"  
 (12 1/2 oz)



Handled Creamer  
**6940E6074** L 4 1/8" H 2 7/8" (6 oz)  
**6940E6073** L 3 1/8" H 2 1/2" (3 1/2 oz)



Unhandled Creamer  
**6940E647** L 2 7/8" W 2"  
 (5 oz)



Ramekin  
**6940E6085** D 3 1/8" H 1 5/8" (4 oz)  
**6940E6084** D 2 3/8" H 1 1/4" (2 oz)



Sugar Bowl  
**6940E646** L 4" W 3" H 1 3/4" (6 oz)



Salt Shaker (1 Hole)  
**6940E6039** L 2" W 1 5/8" H 2 5/8"  
 Pepper Shaker (3 Holes)  
**6940E6040** L 2" W 1 5/8" H 2 5/8"  
 Stopper Replacements  
**6940E6086**

