ASSEMBLY INSTRUCTION

T-SHIRT DISPLAYER

Acrylic Panel Attached

Acrylic Panel Attached
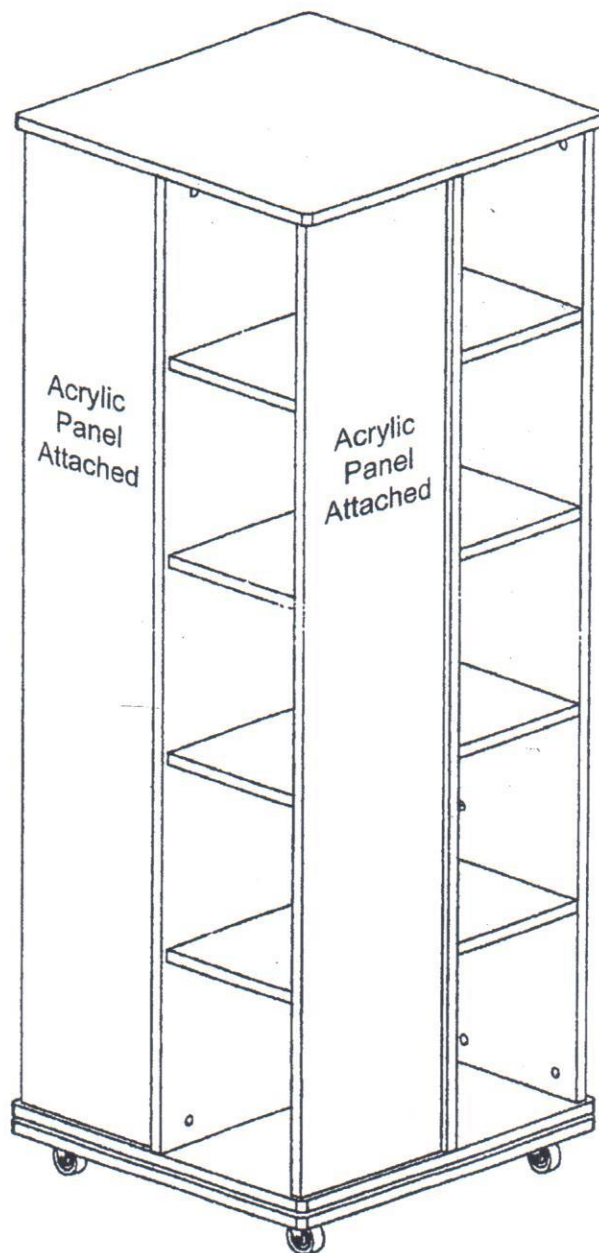
Tools Required:
Philips Screwdriver

Hardware List:
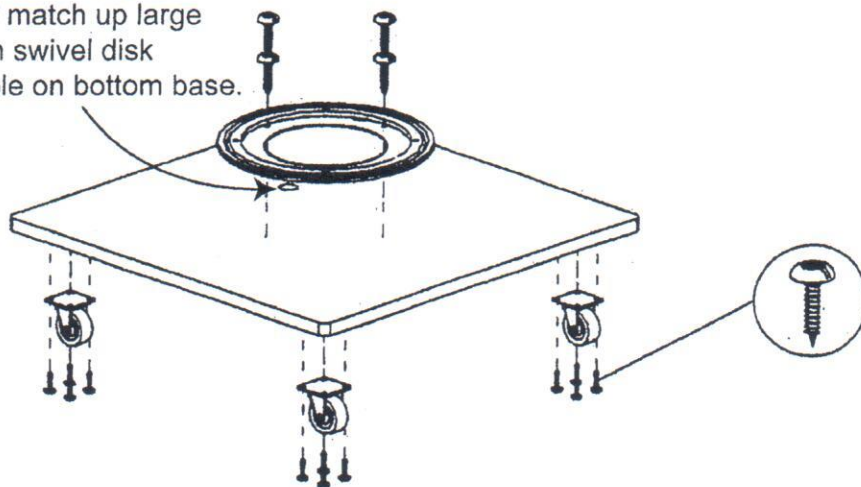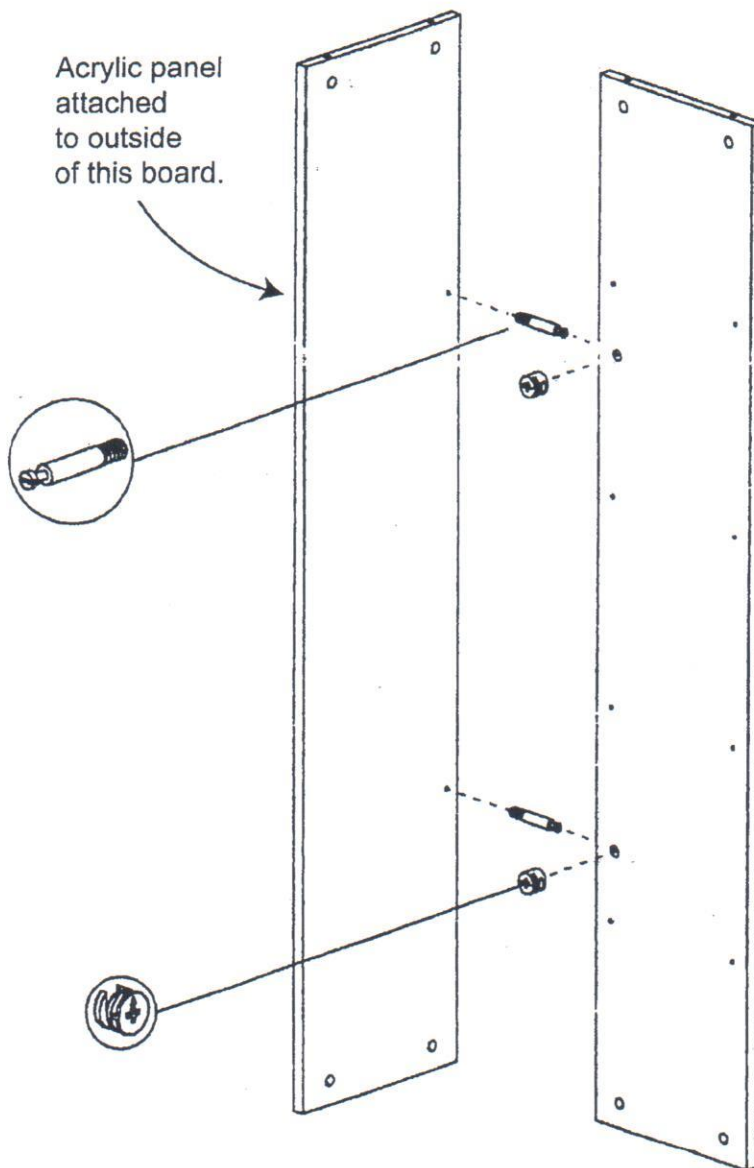
| x36 | x36 | x64 | x2 | x2 | x24 |

⟨1⟩

IMPORTANT: Make sure to match up large hole on swivel disk with hole on bottom base.

⟨2⟩

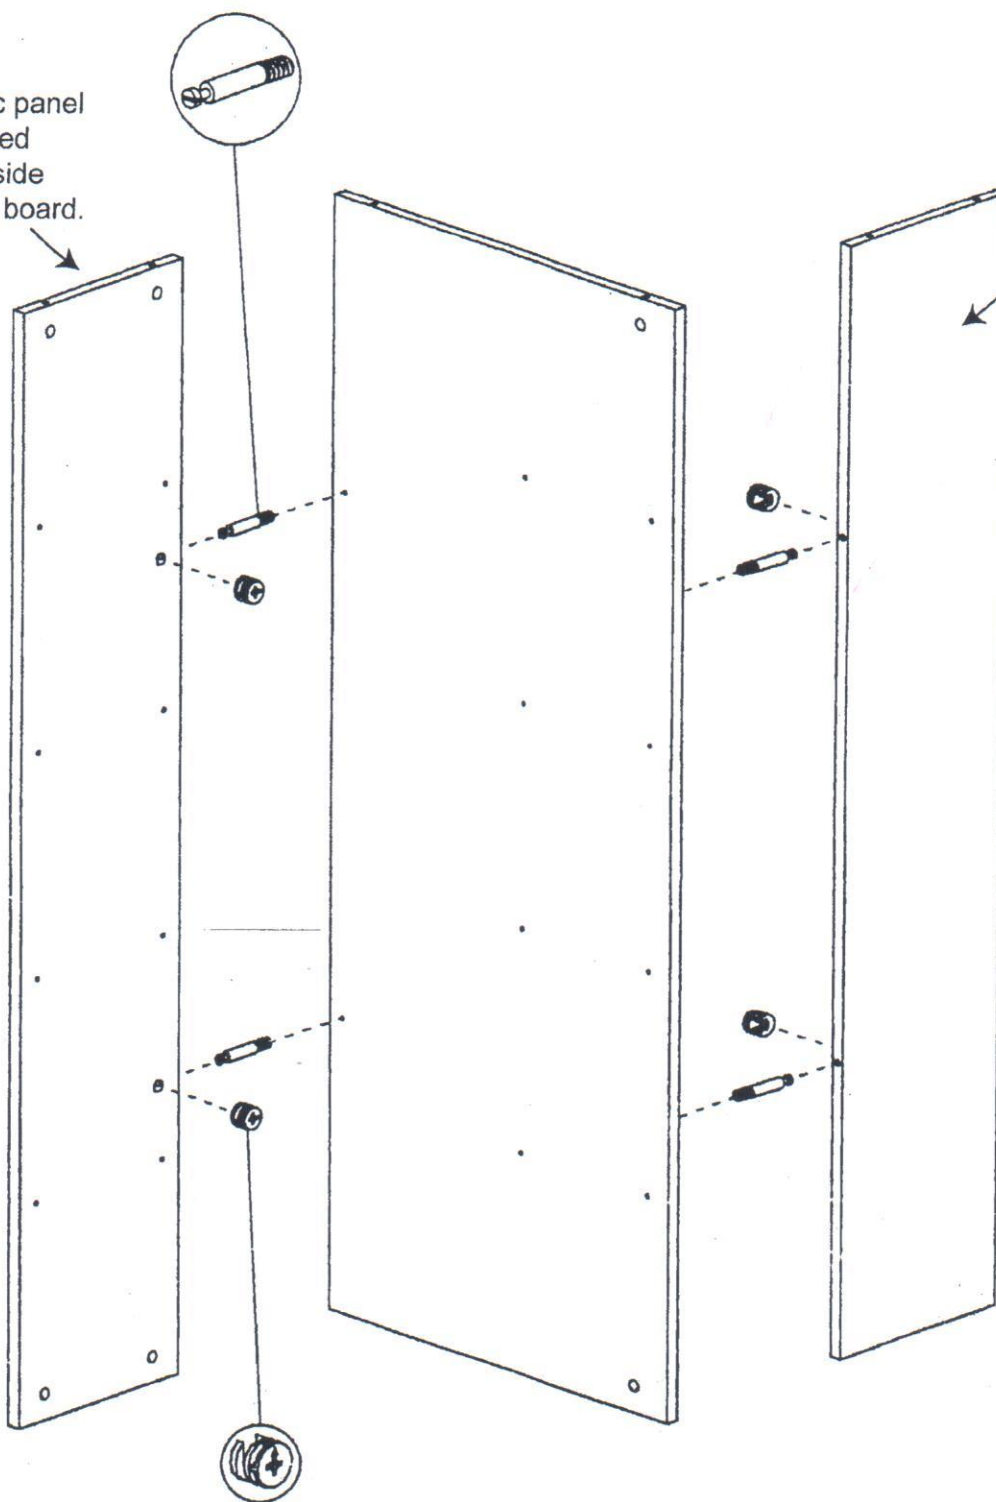Acrylic panel attached to outside of this board.

No acrylic panels on this board.

〈3〉

Acrylic panel
attached
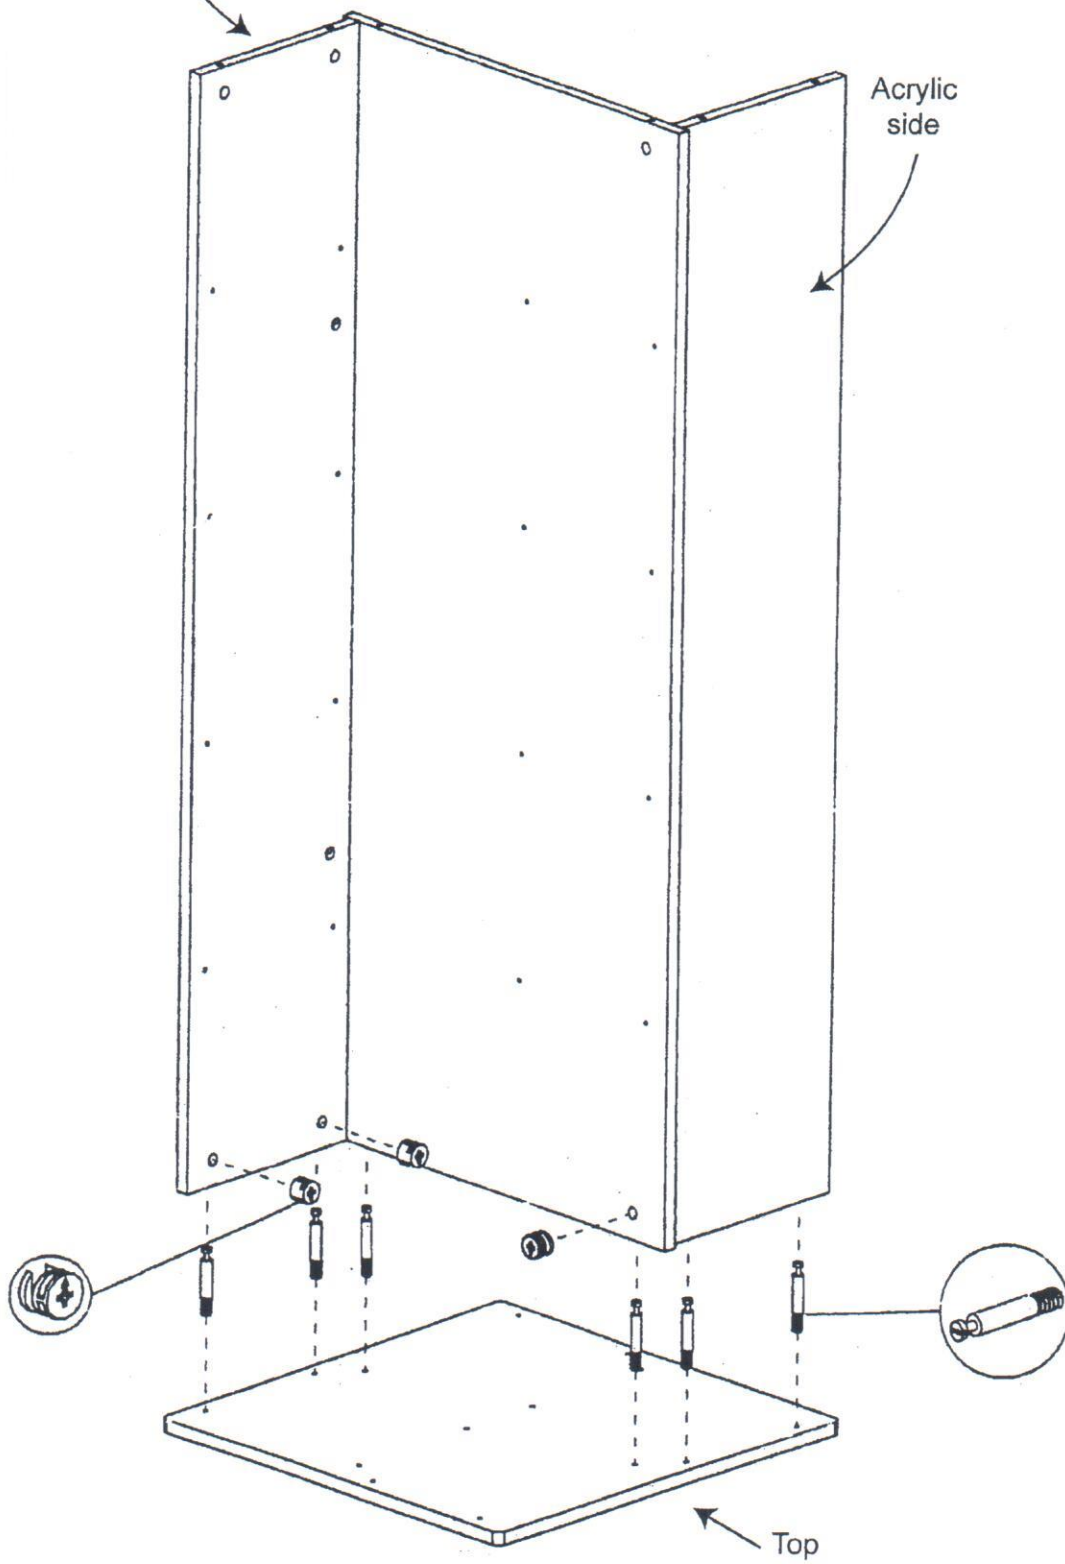to outside
of this board.

Acrylic
side

⟨ 4 ⟩

Acrylic panel attached
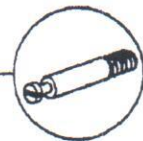to outside of this board.

Acrylic
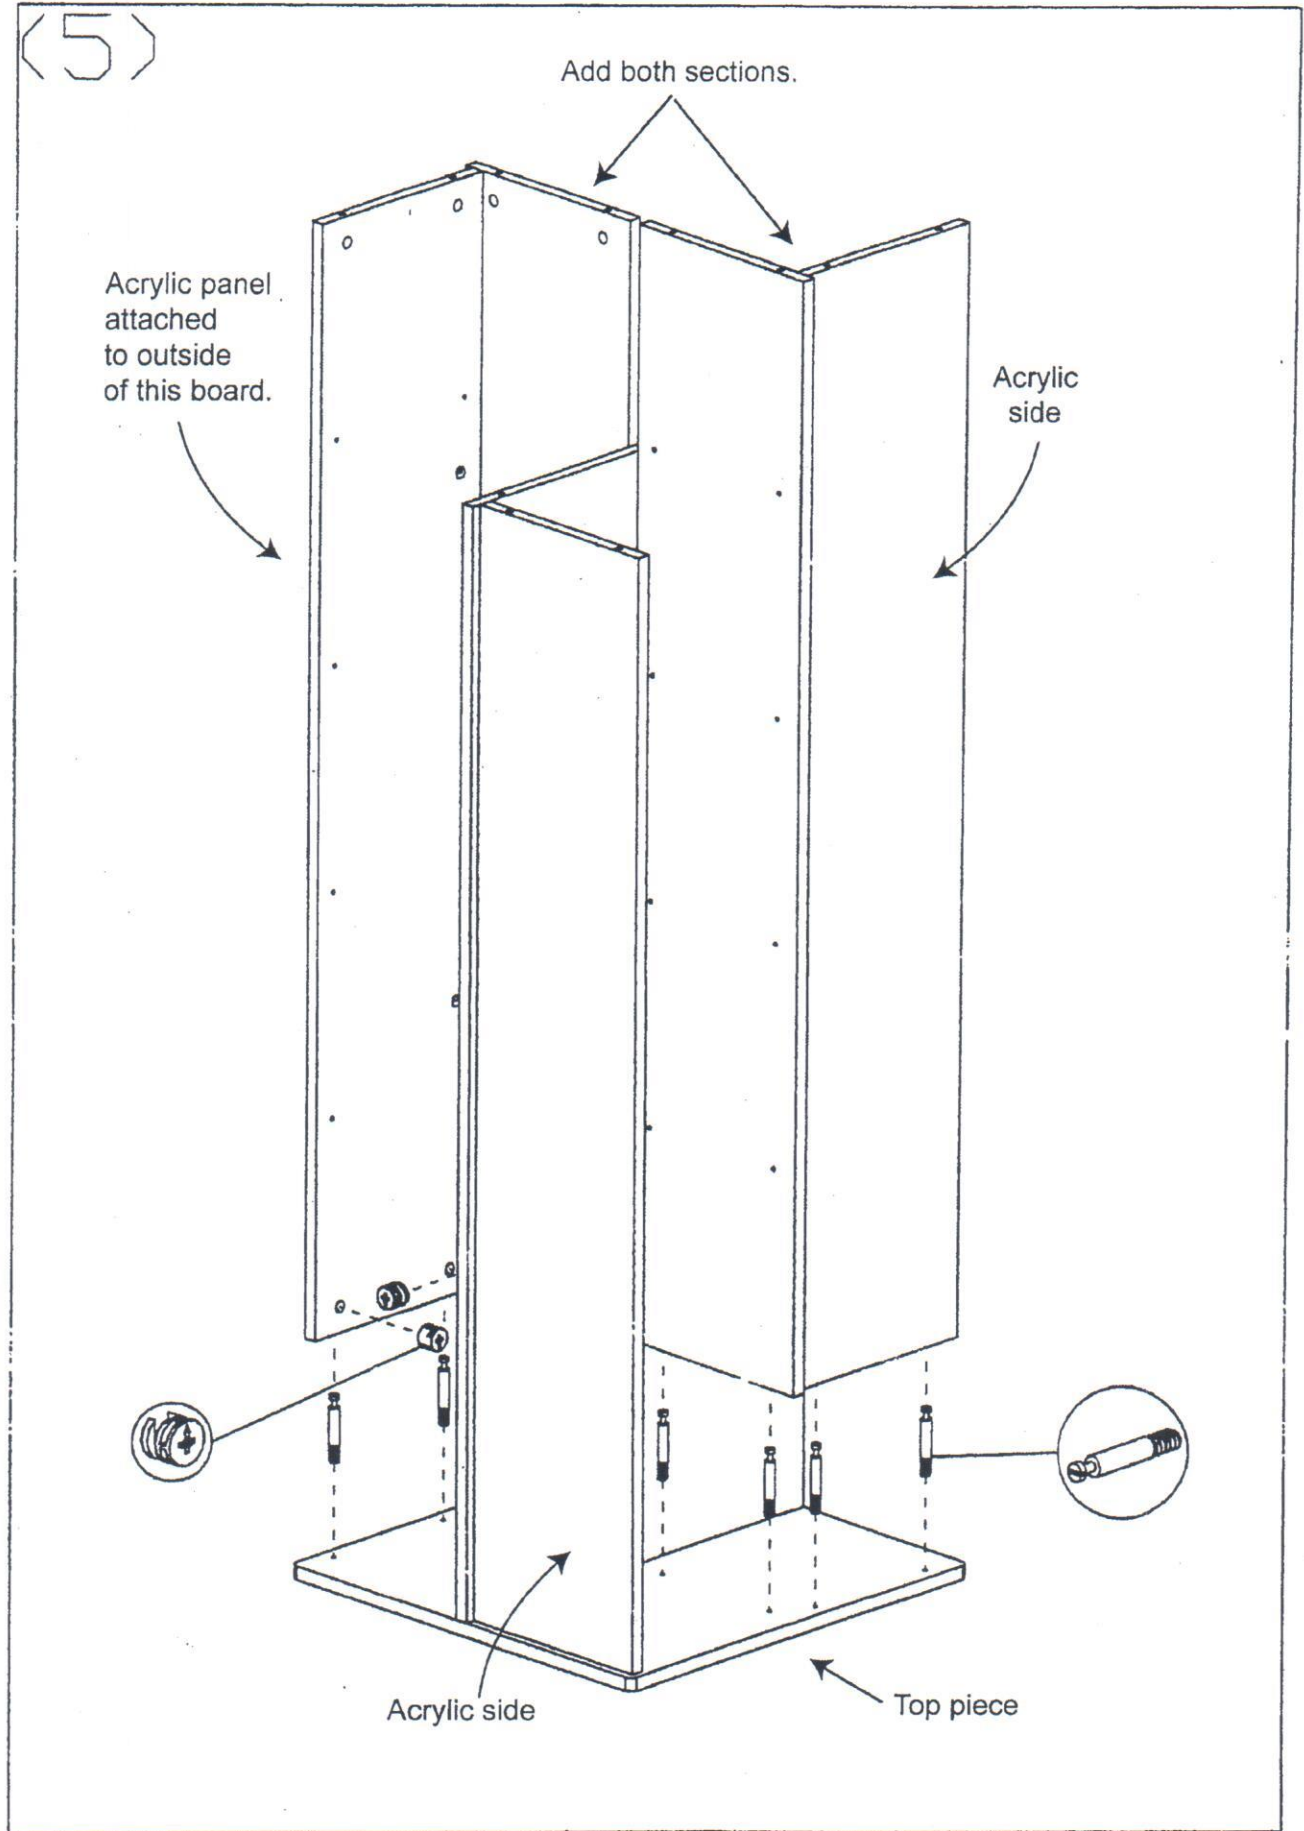side

Top

〈5〉

Add both sections.

Acrylic panel
attached
to outside
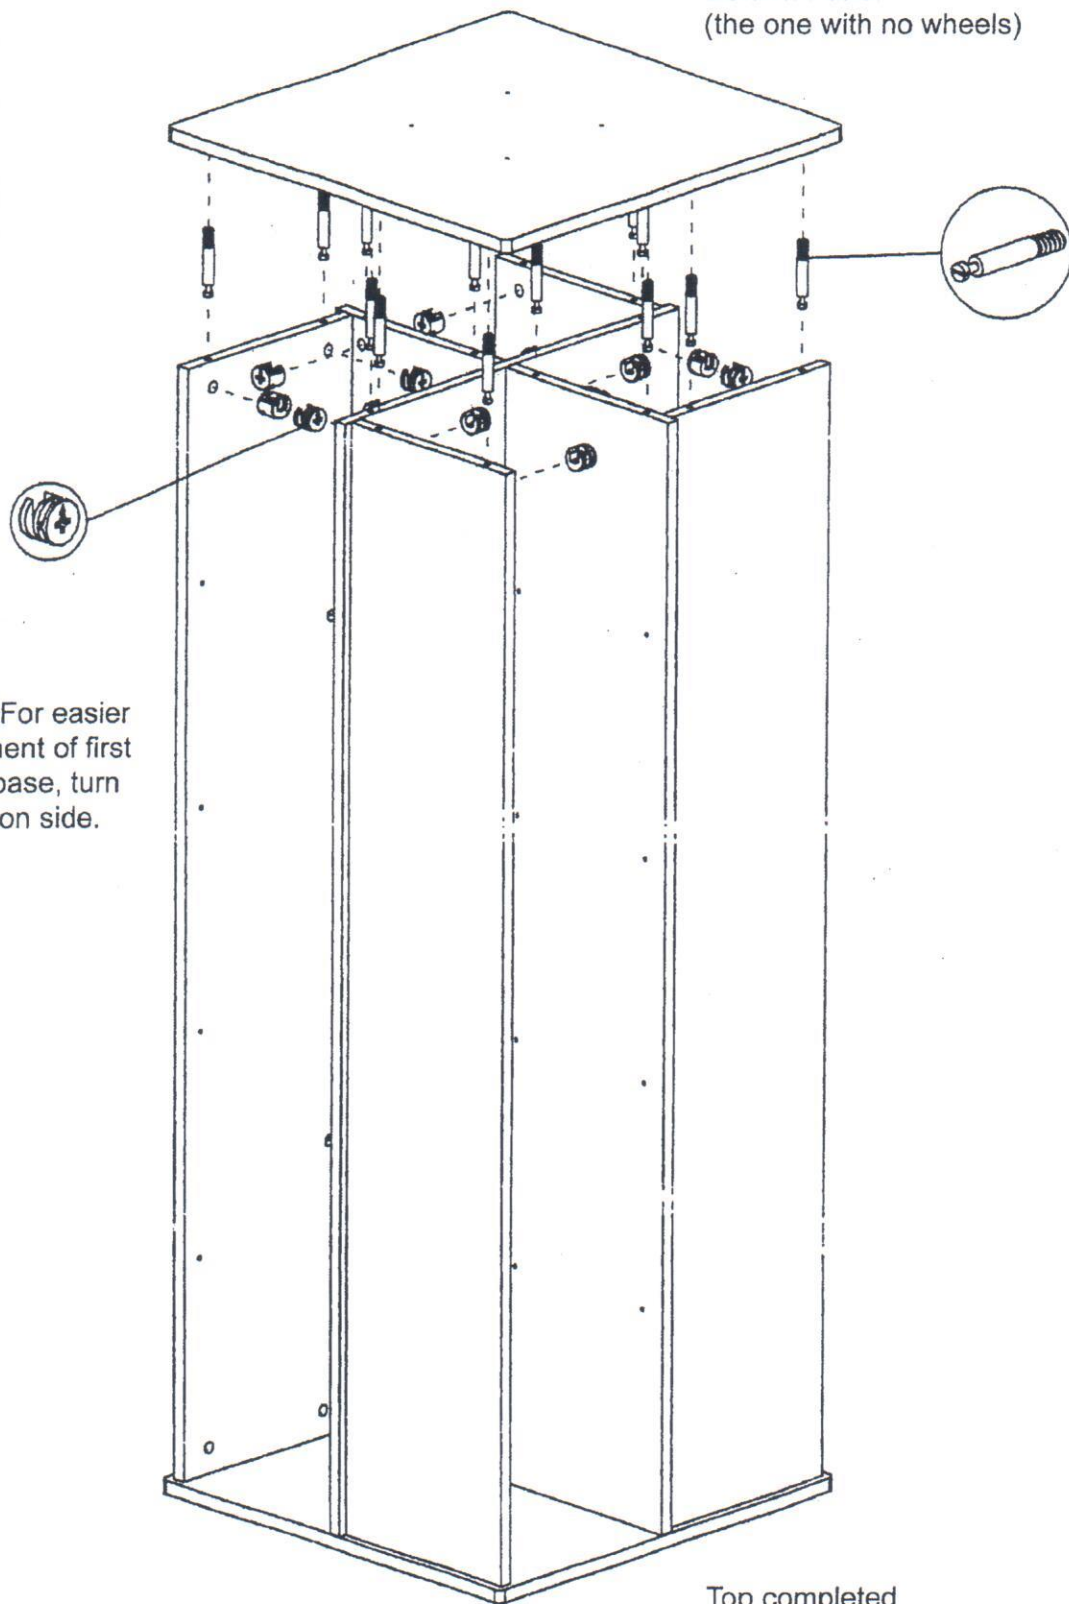of this board.

Acrylic
side

Acrylic side

Top piece

⟨6⟩

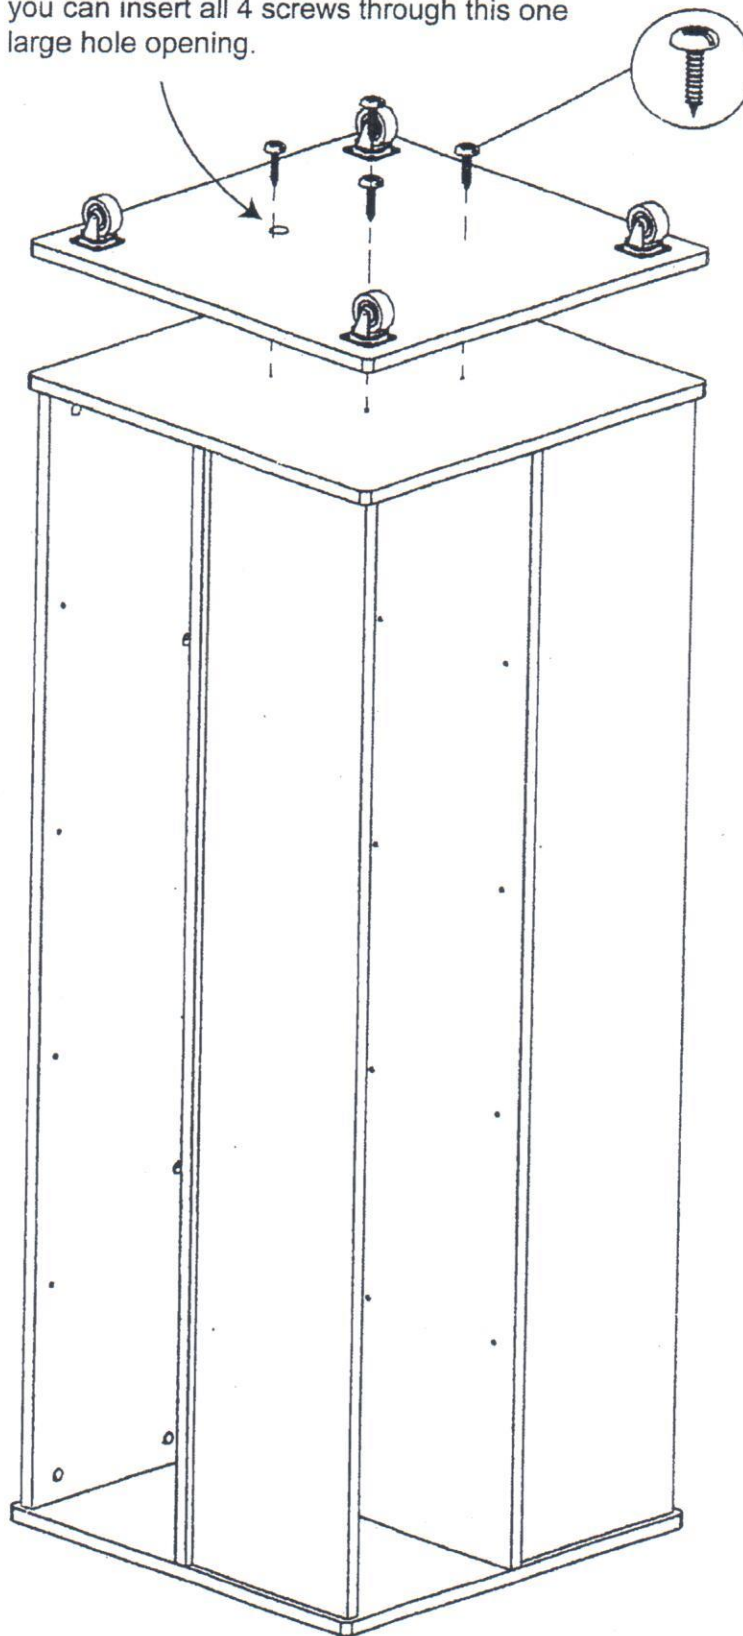Bottom Panel
(the one with no wheels)

NOTE: For easier attachment of first part of base, turn display on side.

Top completed

Bottom base will need room to swivel so that you can insert all 4 screws through this one large hole opening.

Final 4 screws. Use the one hole opening to attach the bottom base with swivel dish to the second base board.

NOTE:
For easier attachment of bottom base, keep display on side and use box to lift up end.

Easy insert pins
hold the 4 shelves
on each side.
Your display is now
ready to fill!