



3 Shelf Wall-96" w/ Metal Bar

****CHECK FOR ALL COMPONENTS BEFORE SET-UP****

Components Required for Assembly


Panels:




- (2) Floor Panels (open hole sockets)
- (3) 1st, 2nd and 3rd Levels (closed hole sockets)

Legs: Accessories:

- (8) 36" Oil and Sponge
- (8) 24" (9) Metal Bars
- (4) 12" without Notches
- (6) 12" Notches 1 side
- (6) 12" Notches 2 sides

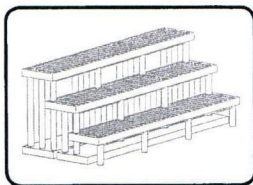

All sockets must be oiled before assembly

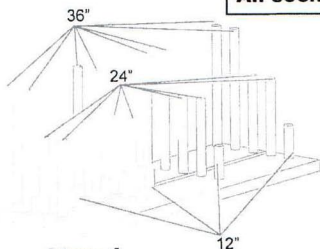


Step 1

(Floor level)

Place floor panels (open hole sockets) in position and insert legs as shown. (Make sure legs go through to ground).


Make sure metal bar is in the front as shown.

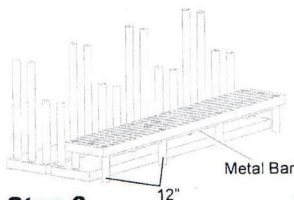

Step 3

(1st level)

Return 1st level panel to upright position and place on (4) 12" legs in floor panels. Make sure metal bar is in the front as shown.

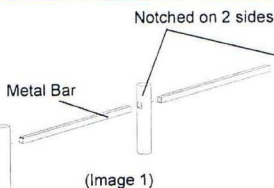


Step 2


(1st level with legs and support bar)

A. Take (2) 12" legs (notched on 1 side) and (2) 12" leg (notched on 2 sides) and insert (3) Support Bar as shown in image 1.

B. Invert 1st level panel (closed hole sockets) and insert (4) 12" legs with support bars in outside corner sockets as shown in image 2.

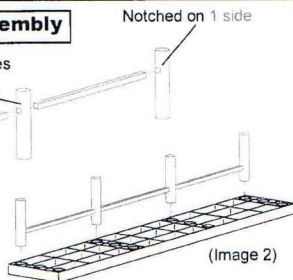

NOTE: If the legs are not lining up with sockets, slightly move legs till legs are aligned and then push legs into sockets.

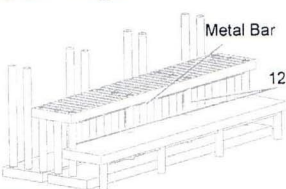


Step 4

(2nd level)

Repeat Step 2.

Return panel to upright position and place on (8) 24" legs in floor panels. Make sure metal bar is in the front as shown.

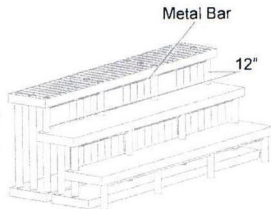

Step 5

(3rd level)

Repeat Step 2.

Return panel to upright position and place on (8) 36" legs in floor panel. Make sure metal bar is in the front as shown.