



FOR
M-40
M-41

Basket Tree


Assembly Instructions

Assembly for the basket tree is very simple; no tools are needed for assembly. The following instructions illustrate step by step how to correctly assemble the display unit. The unit's center post is secured to the base with two bolts. This ensures that the unit does not sway laterally. To further ensure the stability of the unit make sure that these two bolts are very securely tightened.


020497

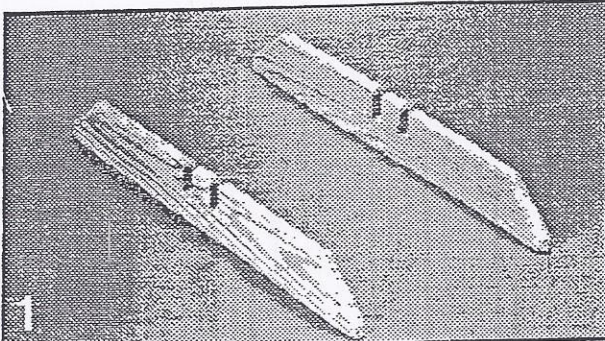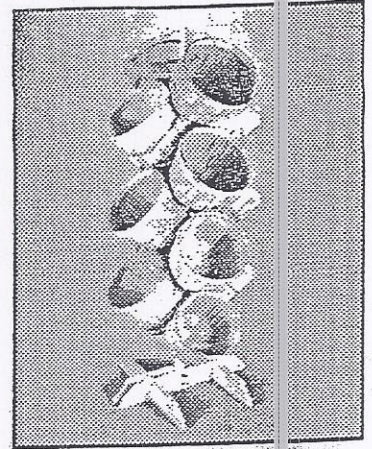


1 First, set the two base pieces without screw holes as shown in the picture above.

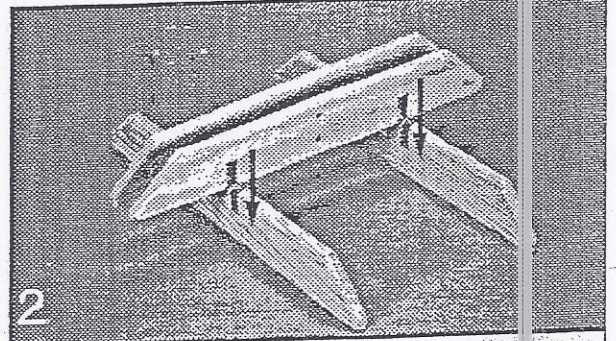


2 Place the other two base pieces on top of the first two base pieces.

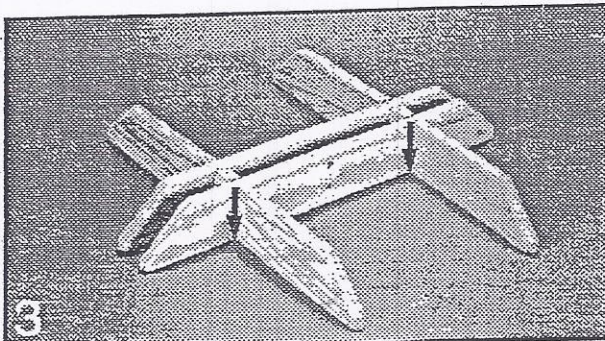

3 Insert the slots of the two bases together to complete the base, as shown above.

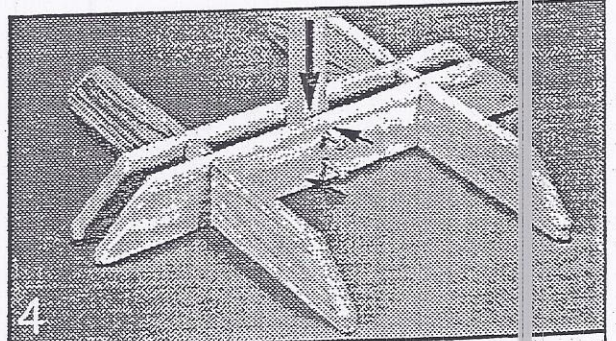


4 Insert the post into the base as shown above and insert the two bolts into the pre-drilled holes.

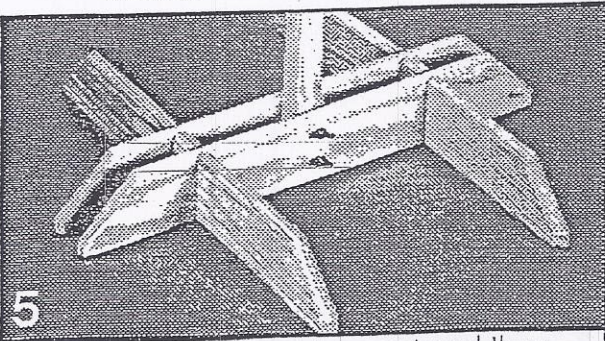

5 Vertically align center post and then securely tighten wing nuts to keep center post from moving laterally.

The unit should now look like the picture at the right. Now insert the wooden dowels into the pre-drilled holes in the center post. Align the dowels so that they are centered with the post and then hang baskets by their handles as shown in the picture at the top right.

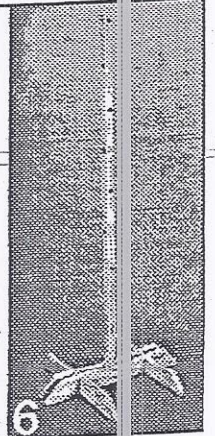

6