

Curtron Products  
5350 Campbells Run Road  
Pittsburgh, PA 15205-9738  
Tel: 800-833-5005 • Fax: 412-787-3665  
www.curtronproducts.com



### **Installation Instruction – Night Shades**

**Model# NS-CLEAR and NS-WHITE**

1. Scribe or snap a chalk line 3 to 3-1/4" from the front edge of case & equally space covers on top.
2. Remove backing from double face tape, one curtain at a time and replace in original position. Retain equal spacing between covers.
3. Drill mounting holes using pre-punched holes in the cover as a guide. Use a 1/8" drill bit and bore thru the top of case only 1/8" deep.

NOTE: The use of a depth gauge is recommended or wrap the drill bit with tape exposing only 1/4" of the tip. Fasten each cover in place after drilling with screws supplied.

4. After all covers are secured to top of case pull first cover down to locate the male snap fastener. Align edge of cover with the vertical edge of case. Top & bottom of cover should be the same distance from the edge. Locate stud and drill 1/8" hole in the case front. If possible locate stud below rub rail for best seal.

IMPORTANT: When Night Shade is in use the defrost cycles and temperature control may have to be adjusted. Consult your refrigeration service rep.


#### Additional Instructions for Cases With Ambient Air Screens

If the case uses an ambient air curtain it is important the following steps be taken. If ambient air is being used, fans will be mounted on top of case. Install covers following normal instruction procedures. However, a single pole switch must also be installed to cut power supply to ambient fans while covers are in use. If case lights are turned off at night the same switch can be used with only minimal electrical changes.

NOTE: If ambient air curtain fans are not turned off while covers are in use, warm air will be trapped inside of case and night shade will be ineffective.

To extend cover life always unfasten using pull tab provided. Covers should be cleaned periodically using a mild cleaning solution.

ECONO-COVER MUST BE SUPPORTED

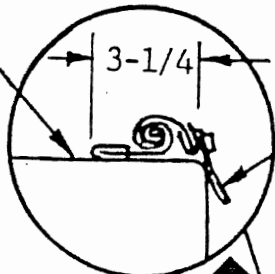

**RIGHT** ▲

**WRONG** ▲

