
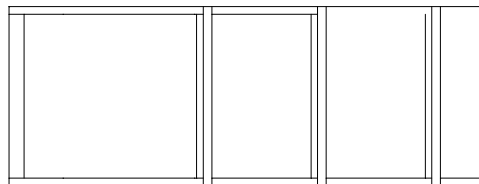


Drawing C:\ASTRO\DRWLADDERSHELF.DRW
ASTRO Rev. 3.2 - 2018/06/28 11:22:44

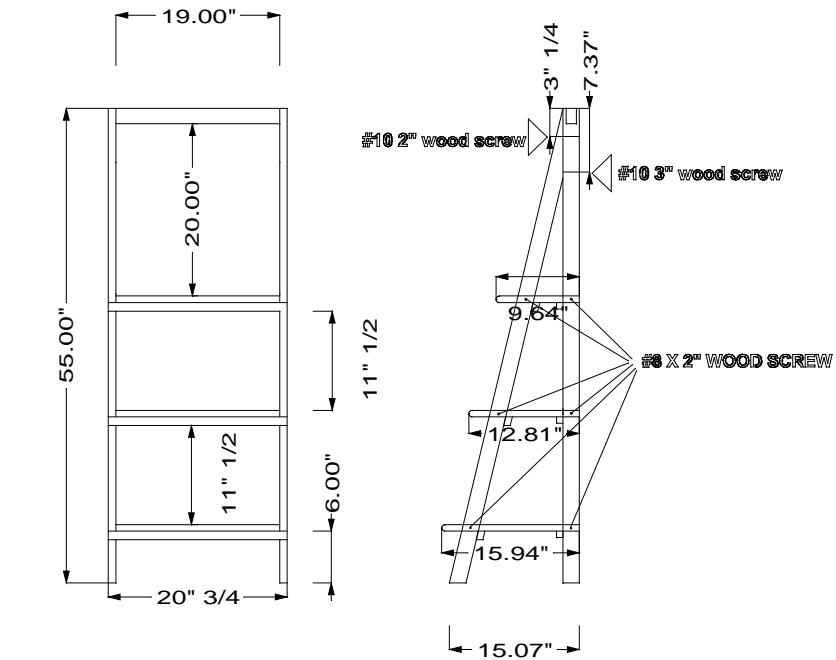

TOOLS REQUIRED: # 2 PHILLIPS HEAD SCREWDRIVER.

- 1) ORIENT FRONT AND BACK FRAMES HORIZONTALLY AS SHOWN AT LEFT.
- 2) ENSURE SHELF CLEATS ARE ARE FACING INWARD.
- 3) ALIGN TOPS OF EACH FRAME FLUSH TO ONE ANOTHER AND ATTACH WITH # 10 WOOD SCREWS AS INDICATED ABOVE.
- 4) STAND THE ASSEMBLED FRAME UPRIGHT AND STARTING WITH THE LOWER SHELF, ALIGN BACK OF SHELF FLUSH WITH REAR FRAME UPRIGHT AND SECURE WITH # 8 WOOD SCREWS AS SHOWN ABOVE.

DX: 96.00" DY: 48.00" DZ: 0" 3/4 Face Upper
Qty holes 6 Qty routings 633 Qty ang. routings 0
Scale 1:57.503