
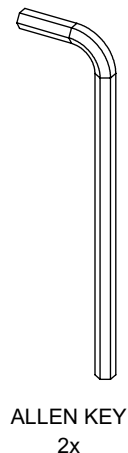
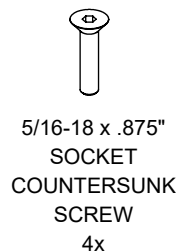
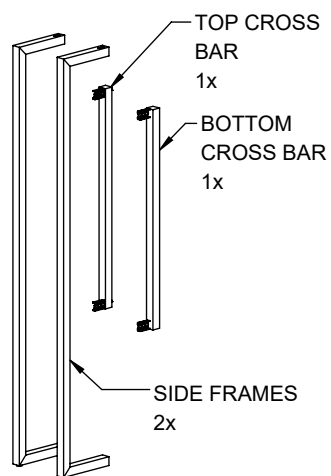
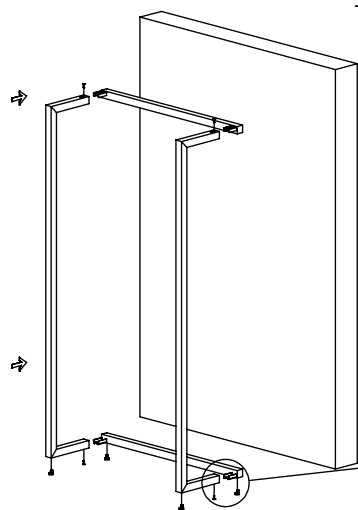



1


**ASSEMBLY INSTRUCTIONS FOR: T500SC****INCLUDED HARDWARE**

2




ASSEMBLE THE WALL FIXTURE FRAME AS SHOWN. ONLY (1) BOLT IS REQUIRED FOR EACH CONNECTOR AT THIS POINT. MOVE THE FRAME AGAINST THE INSTALLATION WALL. LEVEL THE FIXTURE AND MARK ON THE WALL WHERE THE UPPER CROSS BAR IS LOCATED.

**NOTE:** WOOD BLOCKING CAN BE MOUNTED TO THE WALL TO GIVE A CONSISTENT MOUNTING SURFACE AND SPACE THE FIXTURE AWAY FROM WALL MOLDING OR BASEBOARDS.

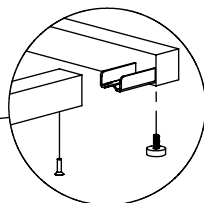


3

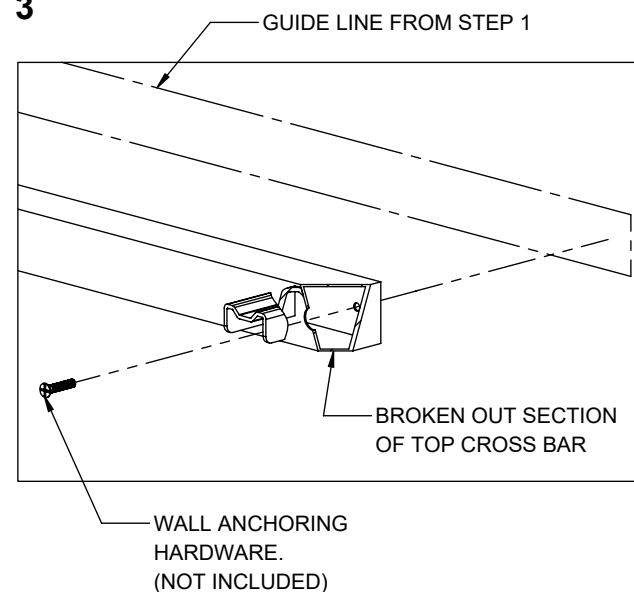


DISASSEMBLE THE WALL FIXTURE FRAME AND SECURE THE TOP CROSS BAR TO THE WALL USING APPROPRIATE HARDWARE (NOT INCLUDED). **NOTE: WALL ANCHORING HARDWARE UP TO 1/4" CAN BE USED.**

4

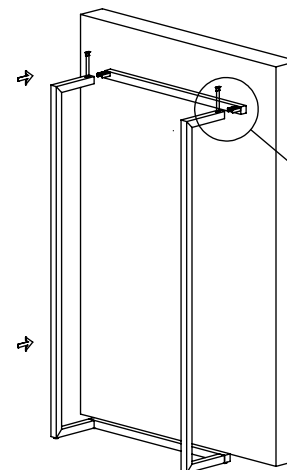

REASSEMBLE ONLY THE SIDE FRAMES AND THE BOTTOM CROSS BAR AS SHOWN. (2) BOLTS ARE REQUIRED FOR EACH CONNECTOR AT THIS POINT. SLIDE THE PARTIALLY ASSEMBLED FRAME INTO THE CONNECTORS ON THE WALL MOUNTED TOP CROSS BAR AND SECURE WITH THE REMAINING SCREWS.

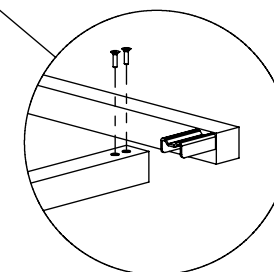

T500SC

**WARNING: IT IS HIGHLY RECOMMENDED THAT THIS UNIT BE PROFESSIONALLY SECURED TO A WALL PER THE ABOVE INSTRUCTIONS.**

SHEET 1 OF 1