



ASSEMBLY INSTRUCTIONS: PSOR

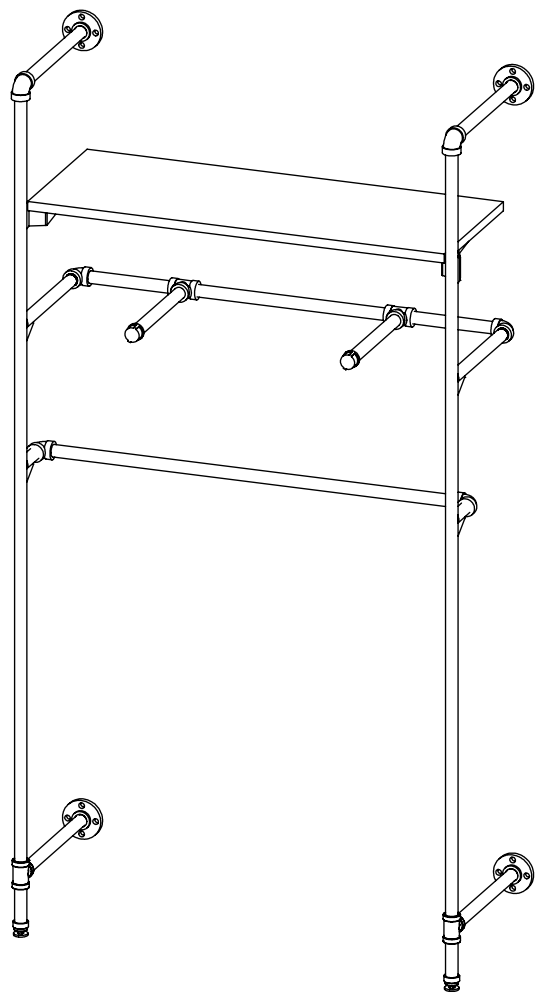

(SHOWN WITH ACCESSORIES FOR REFERENCE)

PSOR


PARTS LIST

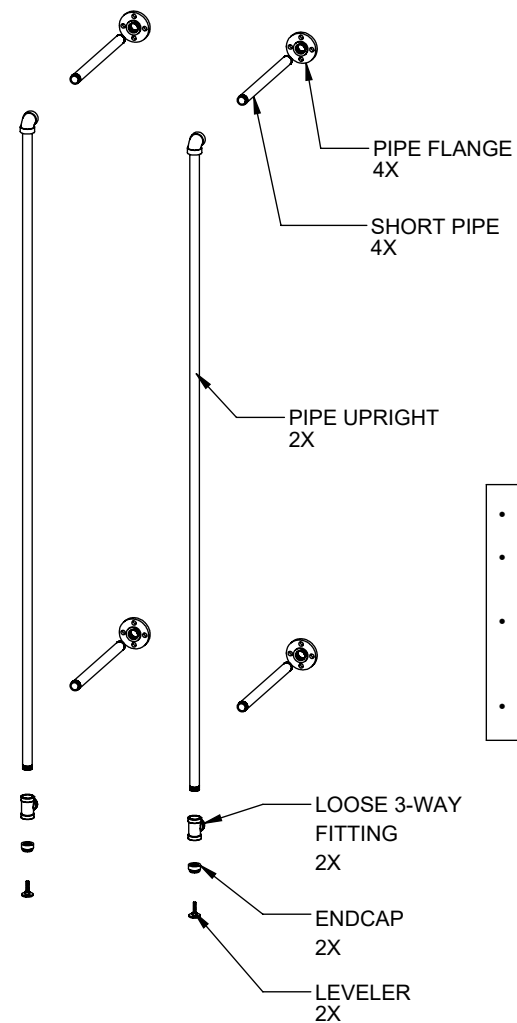

TOOLS REQUIRED FOR ASSEMBLY

- TAPE MEASURE
- BUBBLE LEVEL OR LASER LEVEL
- MOUNTING HARDWARE (COUNTERSUNK WOOD SCREWS OR DRYWALL ANCHORS WITH SCREWS)
- LADDER


INCLUDED TOOLS

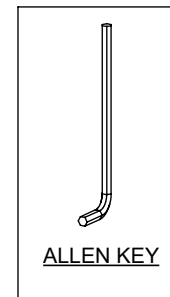


ALLEN KEY

SHEET 1 OF 4


1

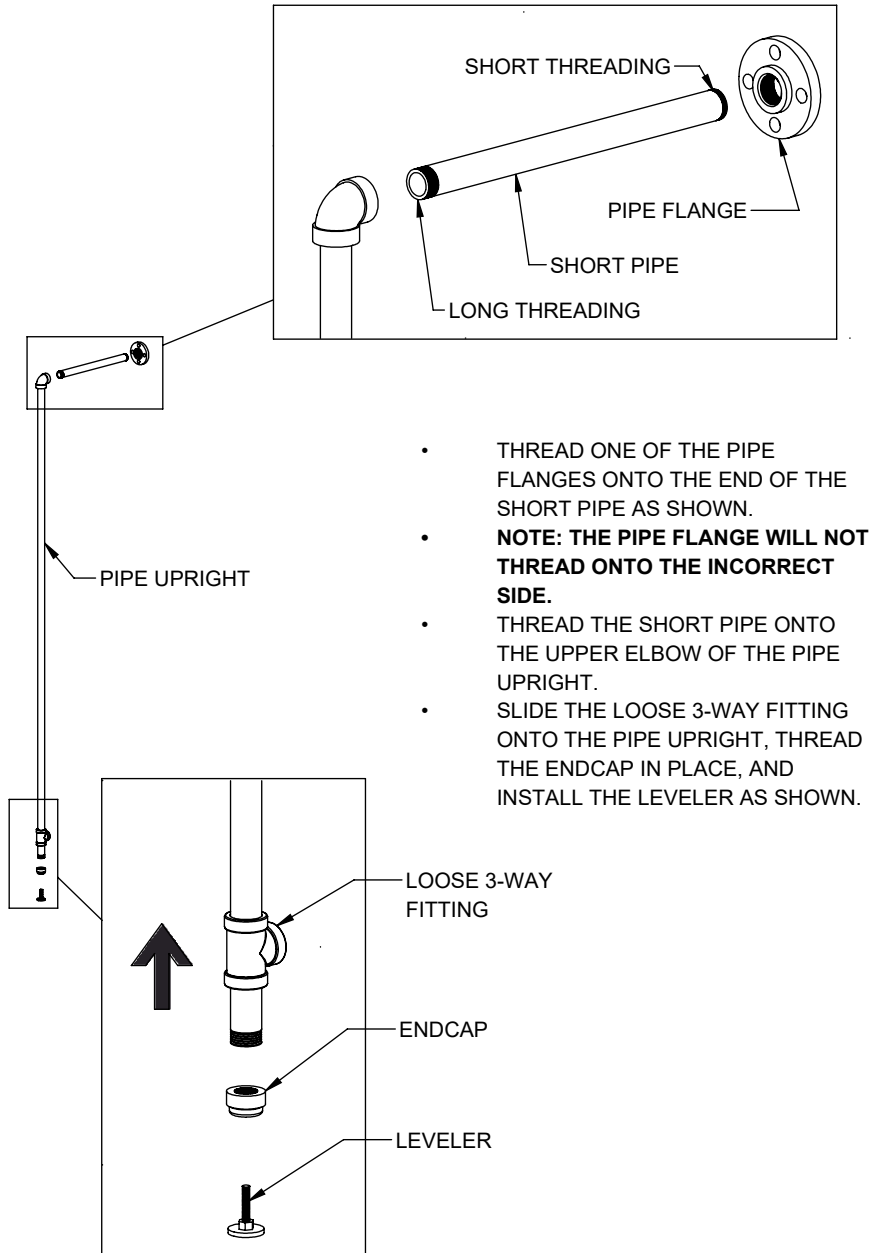

2

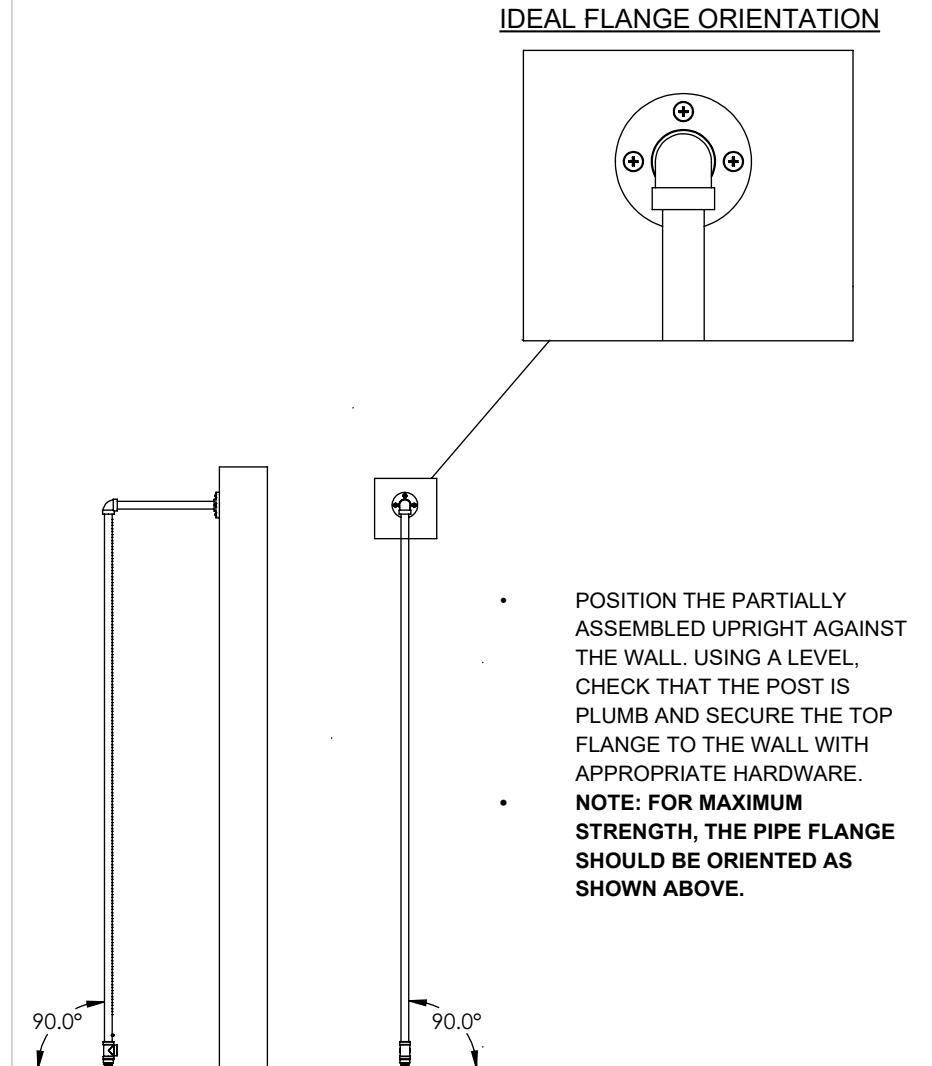


3

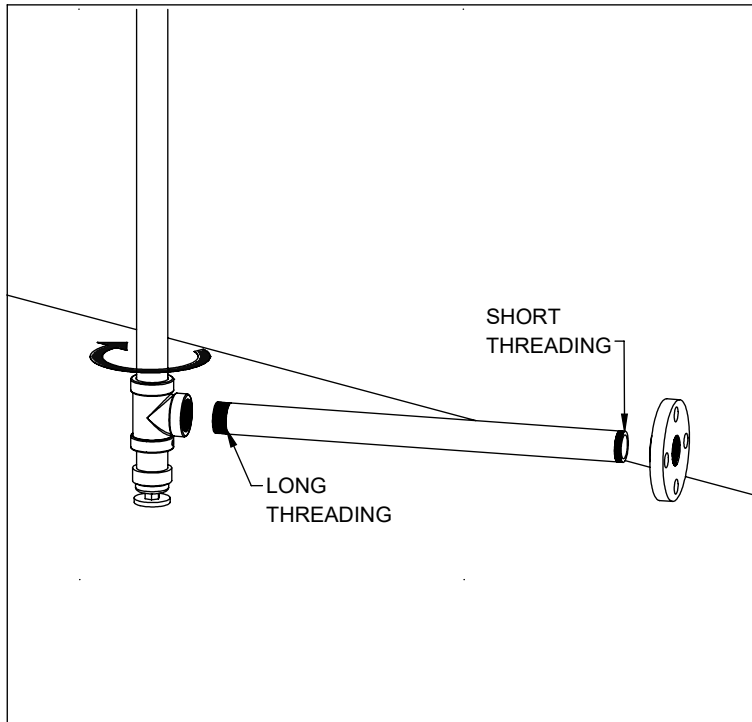


- ROTATE THE LOOSE 3-WAY FITTING AWAY FROM THE WALL AND INSTALL A PIPE FLANGE AND SHORT PIPE IN THE SAME WAY AS STEP 1.

4

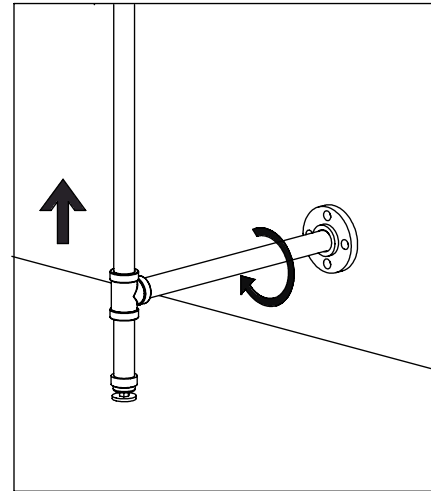


- RAISE THE LOOSE 3-WAY TO THE DESIRED HEIGHT TO AVOID ANY MOLDING OR BASEBOARDS.
- ROTATE THE ASSEMBLY TOWARDS THE WALL AND UNSCREW THE SHORT PIPE UNTIL THERE IS CONTACT WITH THE WALL.

5

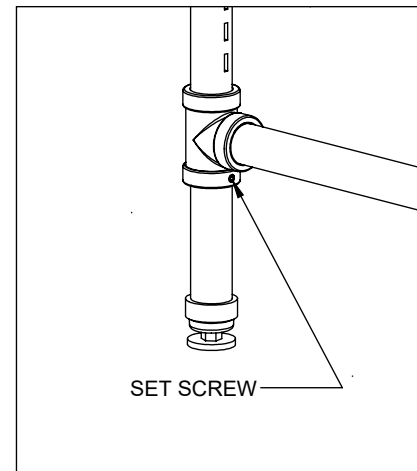


- THE SET SCREW ON THE LOOSE 3-WAY FITTING CAN BE TIGHTENED TO MAINTAIN ITS POSITION WITH THE INCLUDED ALLEN KEY.
- RECHECK IF THE UPRIGHT IS PLUMB AND SECURE THE LOWER PIPE FLANGE TO THE WALL WITH APPROPRIATE HARDWARE.

6

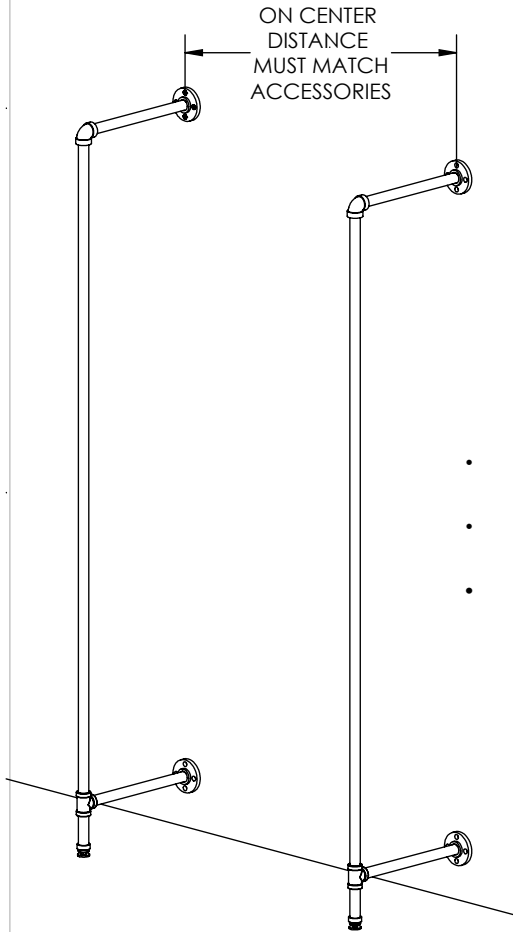

- THE REMAINING UPRIGHT MUST BE POSITIONED SO THE DESIRED ACCESSORIES CAN BE USED. FOLLOW THE PRIOR STEPS TO ASSEMBLE AND INSTALL ANY REMAINING POSTS.
- **NOTE: STANDARD ACCESSORY SIZES ARE 24" AND 48" O.C.**

7

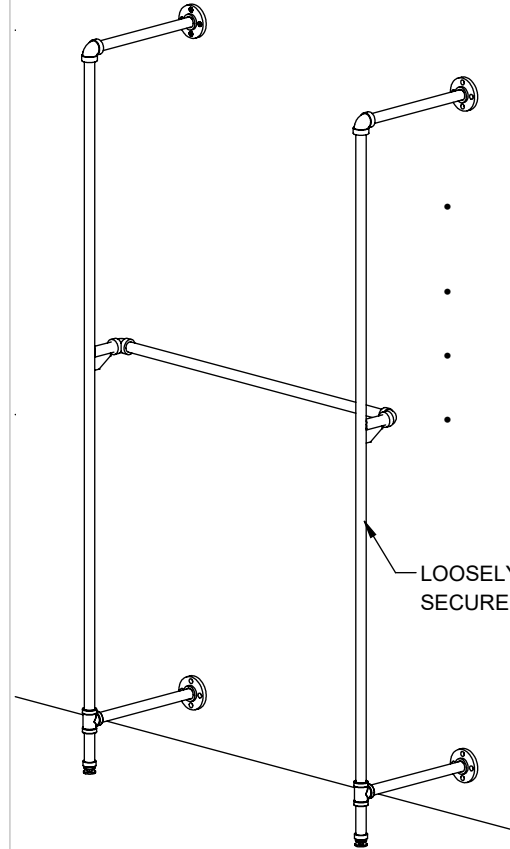

- IT IS RECOMMENDED TO LOOSELY SECURE THE NEXT POST TO THE WALL SO AN ACCESSORY CAN BE TESTED.
- IF IT IS DIFFICULT TO INSTALL OR REMOVE, THE UPRIGHT MAY NEED TO BE ADJUSTED.
- IF THE ACCESSORY IS NOT LEVEL, THE UPRIGHT LEVELER MAY NEED TO BE ADJUSTED.
- IF ACCESSORIES ARE NOT AVAILABLE, USE A TAPE MEASURE TO CHECK THE ON CENTER DISTANCE.

LOOSELY
SECURED