


## **ASSEMBLY INSTRUCTIONS**

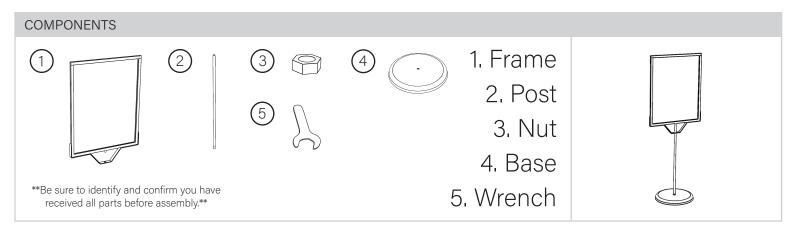

- Screw Nut(3) to Post(2), then screw into Base(4) and tighten using included Wrench(5).
- Peed Post(2) through hole in bottom of Frame(1), then rotate Frame to screw into threaded insert as shown.

