


ASSEMBLY INSTRUCTIONS

COMPONENTS

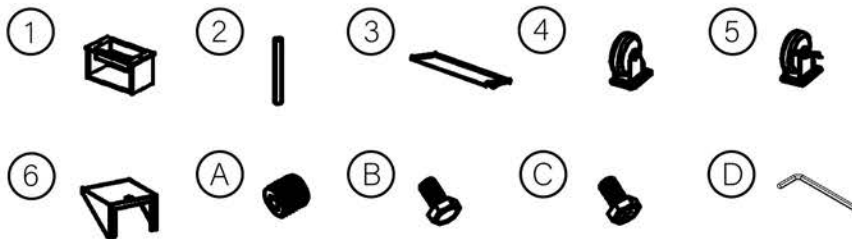

1. Cabinet

2. Support Tubing x 2

3. Slant Shelf

4. Swivel Caster x 2

5. Locking Swivel Caster x 2

6. Side Shelf

A. Bolt M8-A x 8

B. Bolt M8-B x 16

C. Bolt M6-C x 6

D. Allen Wrench

TOOLS NEEDED (NOT INCLUDED):


Phillips Head Screwdriver

14mm Wrench




Be sure to identify and confirm you have received all parts before assembly.


- 1 Lay Cabinet upside down and insert casters into the hat channel using Bolt B.

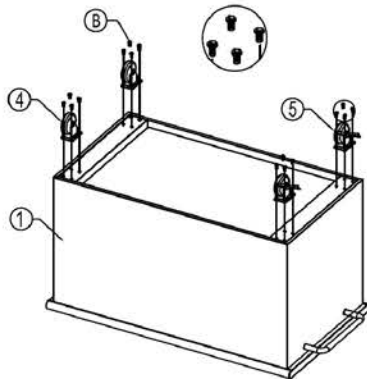

- 2 Turn the cart upright. Insert Support Tubing into counter and secure with Bolt A.

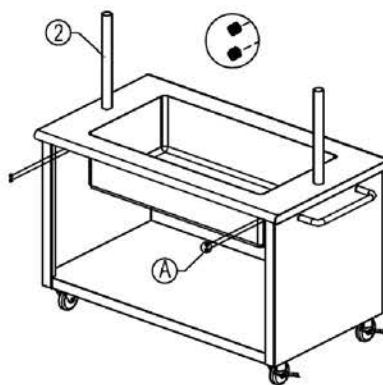

- 3 Insert Support Tubing into brackets on underside of Slant Shelf and secure with Bolt A.

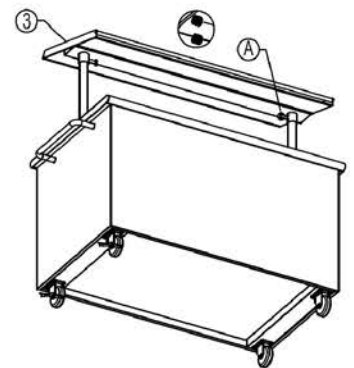

- 4 Install Side Shelf to side of Cabinet opposite handle, and secure with Bolt C.

