



## Ice Hawk Lid Replacement Instructions

### Tools Required:

Cordless Drill — **Optional**


#2 Phillips Screwdriver




1. Remove the 3 hinge screws using a cordless drill and a Phillips Driver bit or a #2 Phillips screwdriver, remove lid.



2. Using a sharp knife, remove protruding plastic from screw holes to ensure a tight seal.

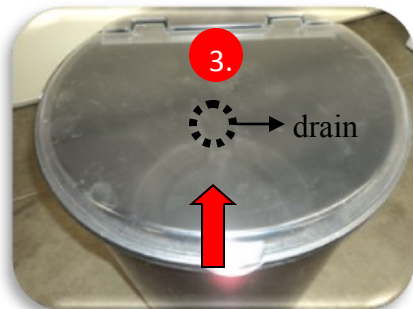

3. Align new lid so handle is straight across from the back drain hole.

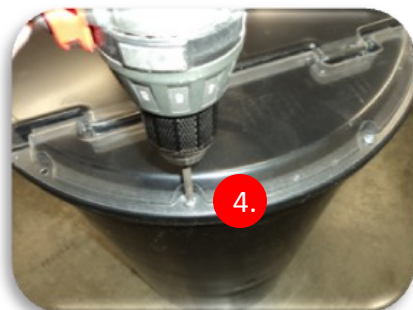

4. Install screws in the 4 provided holes in the back section of the lid.



5. Remove the clear protective covering.



# Ice Hawk Lid Replacement Instructions

Iowa Rotocast Plastics, Inc. is not held liable to any product damage or assembly worker harm during cart or kiosk reassembly after product has been shipped.

© Iowa Rotocast Plastics, Inc. 2015. All Rights Reserved.



Iowa Rotocast Plastics, Inc. • 1712 Moellers Drive, Decorah, IA 52101  
800.553.0050 • 563.382.9636 • fax: 563.382.3016 • [irp@irpinc.com](mailto:irp@irpinc.com)

For other great Iowa Rotocast Plastics, Inc. Kiosks or Carts, go to [www.irpinc.com](http://www.irpinc.com)  
IRP Products are proudly manufactured in Decorah, Iowa USA