



John
BOOS
Since 1887

John Boos & Co.
P.O. Box 609
3601 S. Banker St.
Effingham, IL 62401
PH:888-431-2667 / Fax:800-433-2667
Email: sales@johnboos.com
Web Site: www.johnboos.com

ASSEMBLY INSTRUCTIONS FOR ELEGANTE CART – NO DRAWER

PARTS:



- 1- CART TOP
- 2- STAINLESS SHELVES
- 4- LEGS
- 1- TOWEL BAR

HARDWARE:

- 26- 1/4 WASHERS
- 24- 1/4 NUTS
- 8- 1/4X1-1/4 CARRIAGE HEAD BOLT
- 16- 1/4X1/2 PHILLIPS HEAD BOLT
- 2- 1/4x1-1/2 MACHINE BOLT
- 4- CASTERS

TOOLS REQUIRED:

- 1- 7/16 WRENCH OR SOCKET/RATCHET
- 1- PHILLIPS SCREW DRIVER

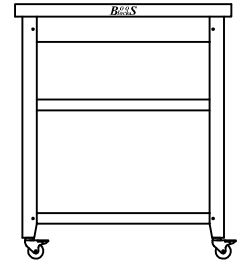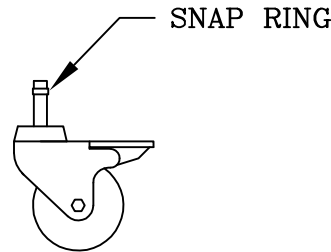

NOTE: IF CASTERS ARE HARD TO INSERT INTO LEG, CRIMP SNAP RING ON CASTER STEM WITH NEEDLE NOSE PLIERS AND TRY TO RE-INSERT CASTER.

CAUTION: MAKE CERTAIN ASSISTANCE IS AVAILABLE WHEN SETTING BLOCK UPRIGHT TO AVOID INJURY TO YOURSELF OR THE BLOCK.

INSTRUCTIONS:

- 1) REMOVE ALL CONTENTS OF BOX, MAKING SURE ASSEMBLY AREA IS FLAT AND CLEAN.
- 2) SEPARATE ALL HARDWARE BY SIZE.
- 3) PLACE CART TOP FACE DOWN ON A RUG, CARTON, OR OTHER PROTECTIVE SURFACE. BE CAREFUL NOT TO ALLOW DRAWER UNIT TO FALL OUT.
- 4) ATTACH EACH OF THE 4 LEGS TO OUTSIDE OF THE APRON CORNERS USING 2EA 1/4X1-1/4 CARRIAGE HEAD BOLTS W/ NUTS & WASHERS. DO NOT FULLY TIGHTEN AT THIS TIME.
- 5) ATTACH THE SHELVES TO THE LEGS USING 2EA 1/4X1/2 PHILLIPS HEAD BOLTS W/ NUTS & WASHERS PER LEG. DO NOT FULLY TIGHTEN AT THIS TIME.
- 6) GO BACK AND FULLY TIGHTEN BOLTS IN STEP 4 AND 5.
- 7) SECURE CASTERS INTO BOTTOM OF LEGS BY PUSHING IN UNTIL THEY SNAP INTO PLACE.
- 8) ATTACH TOWEL BAR ONTO APRON (HOLES PRE-DRILLED) WITH 1/4 X 1-1/2 MACHINE BOLTS & WASHERS.

BE SURE TO FOLLOW MAINTENANCE AND CARE GUIDELINES.

ELEGANTE CART NO DRAWER

