

ASSEMBLY INSTRUCTIONS

designed and manufactured by **MOBILE MERCHANDISERS**


MODULAR DISPLAY MERCHANDISERS MODEL #DNI600

Part List:

- (1) Base
- (1) Lower Frame
- (1) Upper Frame
- (4) Floor Glides
- (x) Small Baskets
- (x) Large Baskets

Hardware List:

- (2) Allen Bolts
- (2) Lock Washers
- (2) Flat Washers

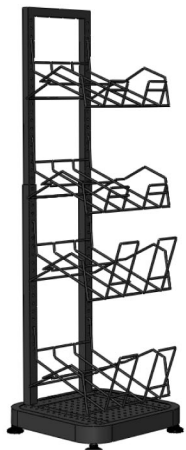

Step 1 - Bolt lower frame to base using allen bolt with lock and flat washer.

Step 2 - Insert (4) floor glides.

Step 3 - Place upper frame into lower frame and position to desired height.

Step 4 - Insert small and/or large baskets. Baskets will hold upper frame at desired height.

