


Dispensing Volume Adjustment

How to Use the Dial Adjustment (Fig. A)

The machine will dispense 8 different weights of batter by using the NYLON DIAL (3) adjustment. The largest deposit of batter is made by setting the dial on its lowest surface.

1. Push the NYLON DIAL (3) down from the KNOB (1) to release it.
2. Rotate the NYLON DIAL (3) to the desired setting.
3. Release the dial , sliding the SELECTOR PEG(2) into the slot..

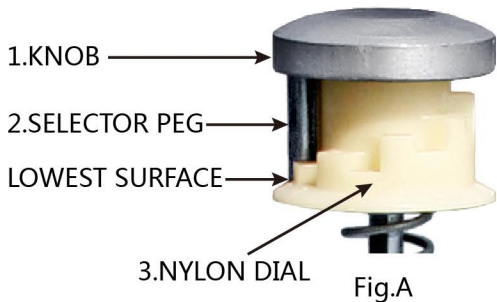

Caution:

Do not try to change the dial setting without first depressing the spring to release the selector peg.

Do not force or use any tool on the dial.