


Congratulations on your Purchase of the 2 Line Marker (DM4)

Please read the following instructions before operating this machine.

GLOSSARY OF TERMS

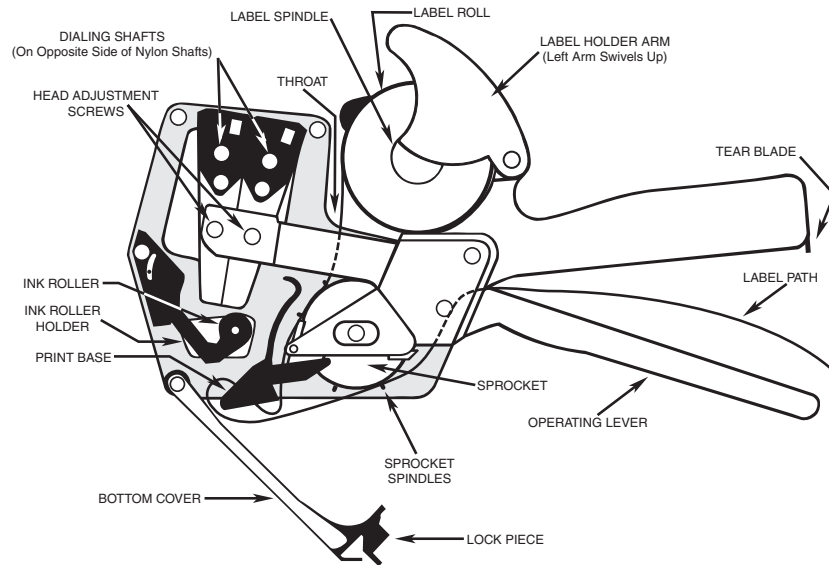

• Facing side plate is shown removed for diagram purpose only.

Loading Instructions

Pull open **LABEL HOLDER ARM** by pulling slightly towards you and then upwards.



1.

Place the **LABEL ROLL** onto the **LABEL SPINDLE** and shut the **LABEL HOLDER ARM**.



2.


Open the **BOTTOM COVER** by gently pinching the plastic tab and lifting the **BOTTOM COVER** away from the marker. Also, pull down the **PRINT BASE** until it stops.



3.

Feed approximately 12" of labels through the **THROAT** of the marker, making sure it goes between the **SPROCKET** and the upper part of the **PRINT BASE**.

NOTE: This step is easier if you create a slight crease along the length of the labels.

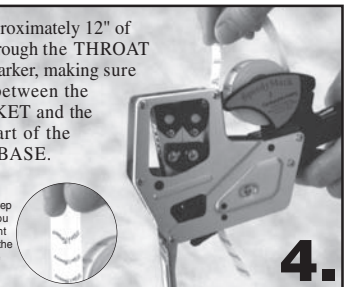

4.

Turn the marker upside down and thread the labels under the **PRINT BASE** as shown.



5.

Lay the label stock over the **PRINT BASE** and position a few **SPROCKET SPINDLES** to line up with the holes in the label stock. Label stock will automatically feed out through the **OPERATING LEVER**.



6.

Gently squeeze the plastic **LOCK PIECE** and shut the **BOTTOM COVER**.



7.

Squeeze and release the **OPERATING LEVER** to dispense the labels.




8.


Dialing the Prices



Adjusting the Print Heads

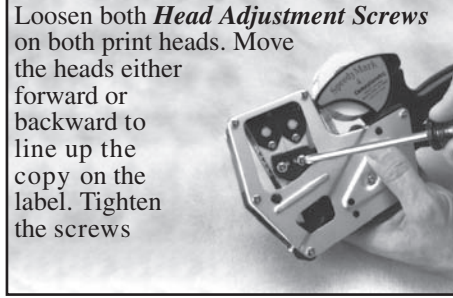

Changing the Ink Roller

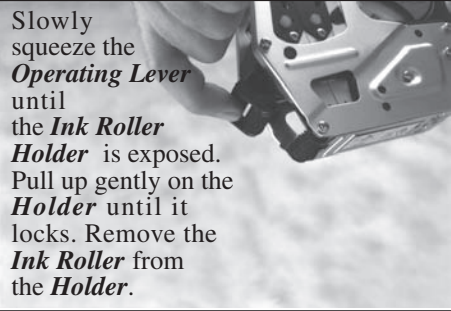

Additional labels and ink rollers may be purchased by calling 800-847-0101.

TROUBLE SHOOTING

Problem:

Check the following:

| | |
|--|--|
| Labels are not advancing | Make sure <i>sprocket</i> is advancing Clean off the adhesive buildup on the <i>sprocket</i> or <i>print base</i> |
| Printing is too light on one side of the label | Make sure the ink roller and ink roller holder is making contact with the heads in a uniform manner. |
| Numbers not printing clearly | Clean the bands with a soft, dry brush. Lint, mixing with ink, will create a buildup on and around the characters on the bands; or replace ink roller . |
| Bottom cover will not open | It may be caught on the side plates which may need to be <i>slightly</i> pulled outward. |
| Printing looks too high/low on labels | Adjust the head forward or backward. |
| Printing hits between two labels | Reload the labels for correct alignment on the <i>sprocket</i> . |
| Ink roller will not spring back up | Check the springs to be sure they are operating on the <i>ink roller holder</i> . |



Food Safety Systems
1-800-847-0101

2 Line Marker (DayMark 4) Operating Instructions



DayMark Lifetime Guarantee

DayMark will repair and recondition your date coding markers as long as labels and ink rollers are being purchased from DayMark. DayMark's replacement policy requires our customers to send in the marker needing reconditioning first, before a replacement marker is issued.

For Replacement

- 1) Call your customer service representative at 1-800-847-0101 to request a replacement marker.
- 2) A Return Authorization Number (RA#) will be assigned for your return.
- 3) Label your box for your DayMark marker return.
- 4) Upon receipt of the return marker, DayMark will ship a replacement marker to you within 24-48 hours. DayMark markers with "special band layouts" will require a longer lead time.